

DATA SHEET

LuminOx O₂ Sensors

Luminescence-based Optical Flow-Through Series



- Luminescence-based optical technology, NOT electrochemical
- Contains no hazardous materials; RoHS & REACH compliant
- Connects directly to a microcontroller without any additional circuitry
- Factory calibrated
- High accuracy, fast response
- Maintenance free^a



Housing



Supply Voltage



Operating Temp



Output Digital



Response Time



BENEFITS

- Compact, flow-through housing with sealed base
- Low power, long life due to non-depleting sensing principle
- Low cost

✓ OUTPUT VALUES^b

Oxygen range 0—25% O_2

Oxygen pressure range 0—300mbar ppO₂ Response time T90 < 10s (typical)

Accuracy

 ppO_2 < 2% FS
Temperature Indication only
Pressure $\pm 5mbar$

O₂ Determined by ppO₂ &

pressure accuracy

Resolution

 $\begin{array}{ccc} ppO_2 & 0.1 mbar \\ Temperature & 0.1 ^{\circ}C \\ Pressure & 1 mbar \\ O_2 & 0.01 \% \\ \\ Lifetime & > 5 \ years \end{array}$

Other sensor options available on request,

email: support@co2meter

TECHNICAL SPECIFICATIONS

Supply voltage (Vs) $4.5-5.5V_{DC}$

Supply current (Is) <7.5mA (streaming one

sample per second),

<20mA Peak

Output Type 3.3V TTL level USART

Temperature

Operating: -30°C to $+60^{\circ}\text{C}$ Storage: -30°C to $+60^{\circ}\text{C}$

Humidity 0—99% Rh (non-condensing)

Barometric pressure range 500—1200mbar Maximum flow rate 1.0 litre/min








a) The sensor housing can be cleaned using a damp cloth. Do NOT immerse the sensor in any cleaning media.

 At ambient conditions. All performance measurements are at STP unless otherwise stated. Following extreme temperature fluctuations, re-calibration may be required.




SENSOR CONSTRUCTION

All dimensions shown in mm. Tolerances = ±0.5mm.

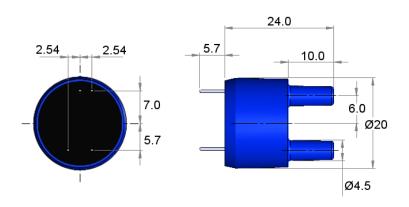

NOTE: 4.5mm OD push-fit tubing connectors.



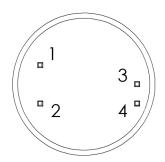

Pin	Designation
1	Vs (+5V)
2	GND (0V)
3	3.3V USART Sensor Transmit
4	3.3V USART Sensor Receive

CONNECTION: Four gold-plated pins (0.64mm²) on a 2.54mm grid for PCB mounting via sockets or hand soldering using no-clean flux.

NOTE: Do NOT put the sensor through a PCB washing process.

NOTE: Always apply power to sensor pins 1 and 2 before attempting to communicate on pins 3 and 4.

The sensor should be treated as an electronic component and handled using the correct ESD handling precautions.




Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.



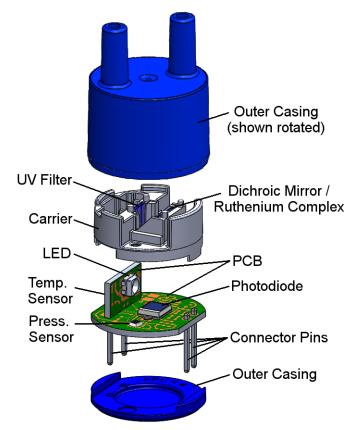

ORDER INFORMATION

Specify the part number below when ordering:

L O X - 0 2 - F

131 BUSINESS CENTER DRIVE ORMOND BEACH, FL 32174 SUPPORT (386) 256-4910 SALES (877) 678-4259 www.CO2Meter.com | Sales@CO2Meter.com