DATA SHEET DCO2Meter.com Zirconia O₂ Sensors **Oxygen Measurement System** FEATURES Fast response zirconium dioxide (ZrO₂) sensor in conjunction with the OXY-LC oxygen sensor interface board Long life, non-depleting technology Integral heating element High accuracy Linear output signal **Supply Gas Temp** Digital Analogue Response Voltage Output Output Time 100°C to 24 V +250°C 10 \ EMPERATURE < 4 secs /OI TAGE URRENT

BENEFITS

- No reference gas required
- No need for temperature stabilisation
- Variety of probe mounting positions available; 28mm, 45mm & 55mm
- M18x1.5 screw mounting

X TECHNICAL SPECIFICATIONS

Supply voltage		
RS485 output variant:		8—28V _{DC}
Analogue output varian	ts:	20—28V _{DC}
Supply current		600mA max. at $24V_{DC}$
		1.2A max. at 12V _{DC}
Digital output		RS485 (Modbus RTU)
Analogue output		4—20mA; load 600Ω max
	or	0 — $10V_{DC}$; load $10k\Omega$ min
Pump impedance at 700°C ¹		< 6kΩ
Permissible gas temperature		-100°C to +250°C
Gas flow rate ²		0—10m/s
Operating pressure limits ³		260—1260mbar absolute
Mounting thread		M18 x 1.5
	1)	The constant current source used in the

OUTPUT VALUES

Oxygen range (analogue output)	or	0.1—25% O ₂ 0.1—100% O ₂		
Oxygen range (Modbus RTU)	0.	0.1—100% O ₂		
Accuracy after calibration		0.5% O ₂		
Accuracy after calibration		0.5% O ₂		
Output resolution		0.01% O ₂		
Response time (10—90% step)		< 4s		
Initial warm up time (till stable output)		5—10mins		
Output inactive start up delay (heater warm up)				
From OFF to ON mode:		60s		
From Standby to ON mode (RS485 on	ly):	20s		

The constant current source used in the pump circuit should be designed to drive a load of up to $6k\Omega$. With baffle fitted to shield the sensor from direct cooling and pollution by the flue gas; refer to DS0122 ZrO₂ Screw Fit Probe Datasheet for fitment details

 NOTES
 2)
 With baffle fitted to shield the sense Probe Datasheet for fitment details.

 3)
 Sensor and interface for correct bar

Sensor and interface for correct barometric pressure compensation.

DESCRIPTION


The Oxygen Measurement System is a complete solution consisting of a zirconium dioxide oxygen sensor and interface PCB. Dimensional overview given below; full specifications for each, including complete outline drawing and electrical interface details can be found:


- DS0122 ZrO₂ Screw Fit Probe Datasheet
- DS0058 OXY-LC Oxygen Sensor Interface Datasheet

Contact support@co2meter.com for details.

Interface Board layout


Always handle the interface board using the correct ESD handling precautions.

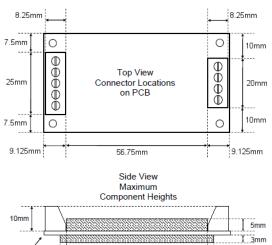

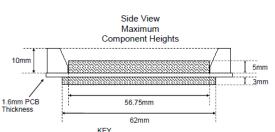

Area with Components

Sensor layout

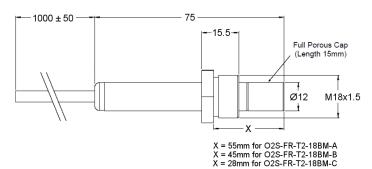

CAUTION

Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.

ORDER INFORMATION

Referring to the tables below will allow you to tailor a system to suit your specific requirements.

For example: Ordering part numbers OXY-LC-A25-455 and O2S-FR-T2-18BM-C will create a system that has a 4-20mA analogue output from the board and a sensor probe that has a length of 28mm from the sensor tip to the beginning of the M18x1.5 screw mount.

Interface Board

PCB Part Number	O₂ Measure Range	Output Type	Heater Voltage
OXY-LC-485	0.1% and 100%	Modbus RTU	Configurable
OXY-LC-A25-455	0.1 to 25%	Current: 4—20mA	4.55V _{DC}
OXY-LC-V25-455	0.1 to 25%	Voltage: 0—10V _{DC}	$4.55V_{DC}$
OXY-LC-A100-455	0.1 to 100%	Current: 4—20mA	4.55V _{DC}
OXY-LC-V100-455	0.1 to 100%	Voltage: 0—10V _{DC}	4.55V _{DC}

Sensor

Sensor Part Number	Probe Length
O2S-FR-T2-18BM-A	55mm
O2S-FR-T2-18BM-B	45mm
O2S-FR-T2-18BM-C	28mm

As customer applications are outside of CO2Meter's control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application.

For more information visit us,

www.co2meter.com/pages/terms-conditions

For technical assistance or advice, please email: support@co2meter.com

Contact us: CO2Meter, Inc. 131 Business Center Drive Ormond Beach, FL 32174 USA



© 2018 CO2Meter, Inc.