








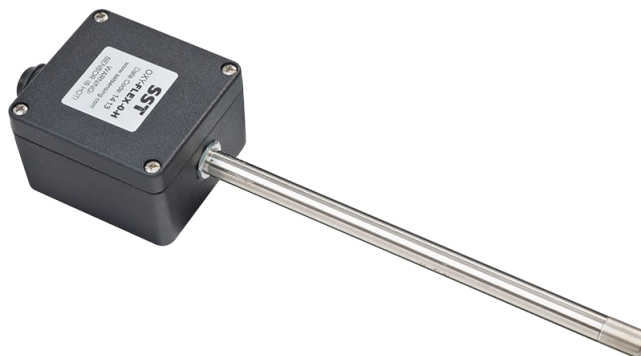


# DATA SHEET

## Zirconia O<sub>2</sub> Sensors OXY-Flex Oxygen Analyser

### FEATURES

- High accuracy linear output
- Externally triggered automatic or manual calibration
- Can be calibrated in fresh air (20.7% O<sub>2</sub>) or to any other known O<sub>2</sub> concentration
- Selectable output filtering allows adaptive, fast and dynamic or slow and stable output



Housing	Supply Voltage	Gas Temp	Digital Output	Analogue Output	Response Time
 COMPACT	 24 V VOLTAGE	 -100°C to +250°C TEMPERATURE	 RS232	 0 - 10 V VOLTAGE	 < 15 secs
 ROBUST		 -100°C to +400°C TEMPERATURE		 4-20mA CURRENT	

### BENEFITS

- Cycling 3.3V<sub>DC</sub> logic output allows direct monitoring of the O<sub>2</sub> sensor pump cycle for diagnostic purposes
- No reference gas required

### OUTPUT VALUES

Oxygen range (analogue output) <sup>2</sup>	0.1 <sup>1</sup> —25% O <sub>2</sub>
or	0.1 <sup>1</sup> —100% O <sub>2</sub>
Oxygen range (RS232 output)	0.1 <sup>1</sup> and 100% O <sub>2</sub>
Accuracy after calibration <sup>3, 4</sup>	1% O <sub>2</sub>
Repeatability after calibration <sup>3</sup>	0.5% O <sub>2</sub>
Output resolution	
Analogue 4—20mA	0.01mA
Analogue 0—10V <sub>DC</sub>	0.01V
Digital RS232	0.01% O <sub>2</sub>
Response time	< 15s
Warm up time (prior to sensor operation)	60s
Output stabilisation time	~ 180s

### TECHNICAL SPECIFICATIONS

Supply voltage	24V <sub>DC</sub> ± 10%
Supply current	500mA max. at 24V <sub>DC</sub>
Digital output	RS232
Analogue output	4—20mA; load 600Ω max.
or	0—10V <sub>DC</sub> ; load 10kΩ min.
Housing temperature limits	
Storage:	-10°C to +85°C
Operating:	-10°C to +85°C
Permissible gas temperatures (probe tip)	
Standard:	-100°C to +250°C
High:	-100°C to +400°C
Gas flow rate	0 to 10 m/s
Permissible acceleration	
Repetitive	5g
Incidental	30g





- 1) Prolonged operation below 0.1% O<sub>2</sub> can damage the sensing element.
- 2) Range selectable by altering the position of the jumper links on the PCB; refer to [PCB Layout](#) on page 3.
- 3) Assuming barometric pressure (BP) remains constant.
- 4) As the O<sub>2</sub> sensor measures the partial pressure of oxygen (PPO<sub>2</sub>) within the measurement gas deviations in the BP from that present during calibration will cause readout errors proportional to the change. EG. if the sensor reads 21% O<sub>2</sub> at 1013.25mbar and the BP increases by 1%, the sensor readout will also increase by 1% to 21.21% O<sub>2</sub>.



## OUTLINE DRAWING AND MOUNTING INFORMATION

All dimensions shown in mm. Tolerances =  $\pm 1$ mm.

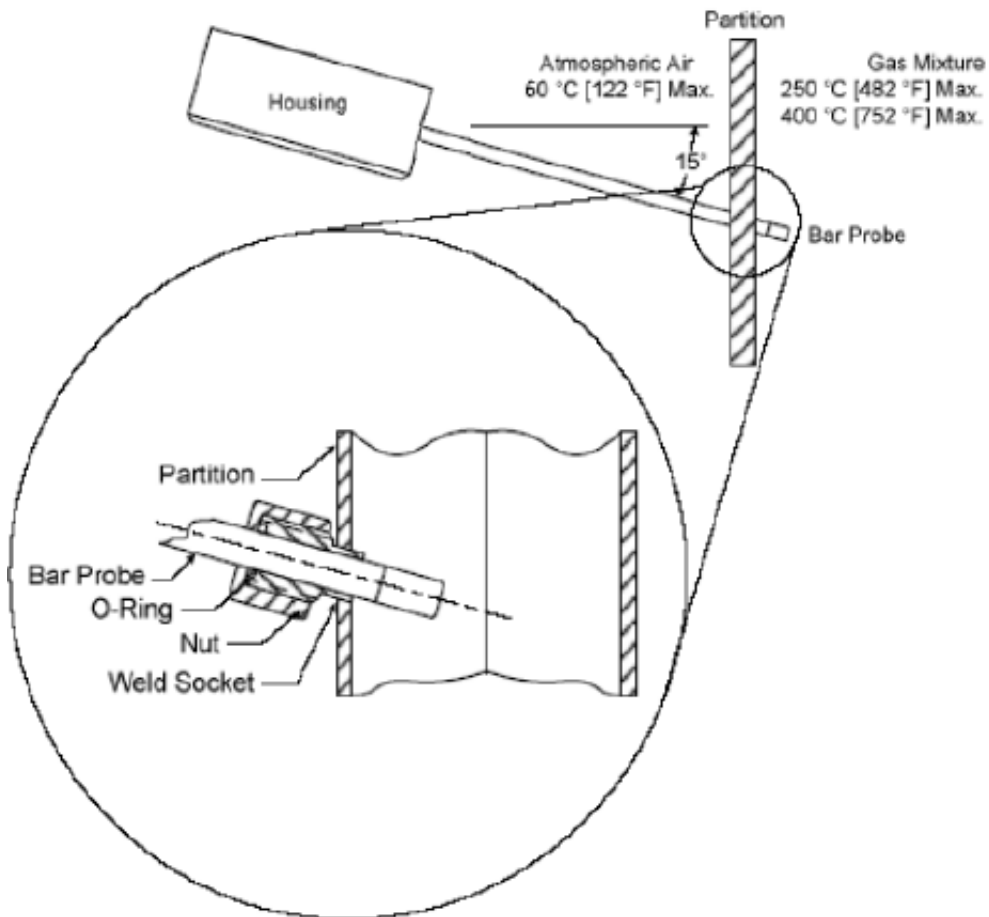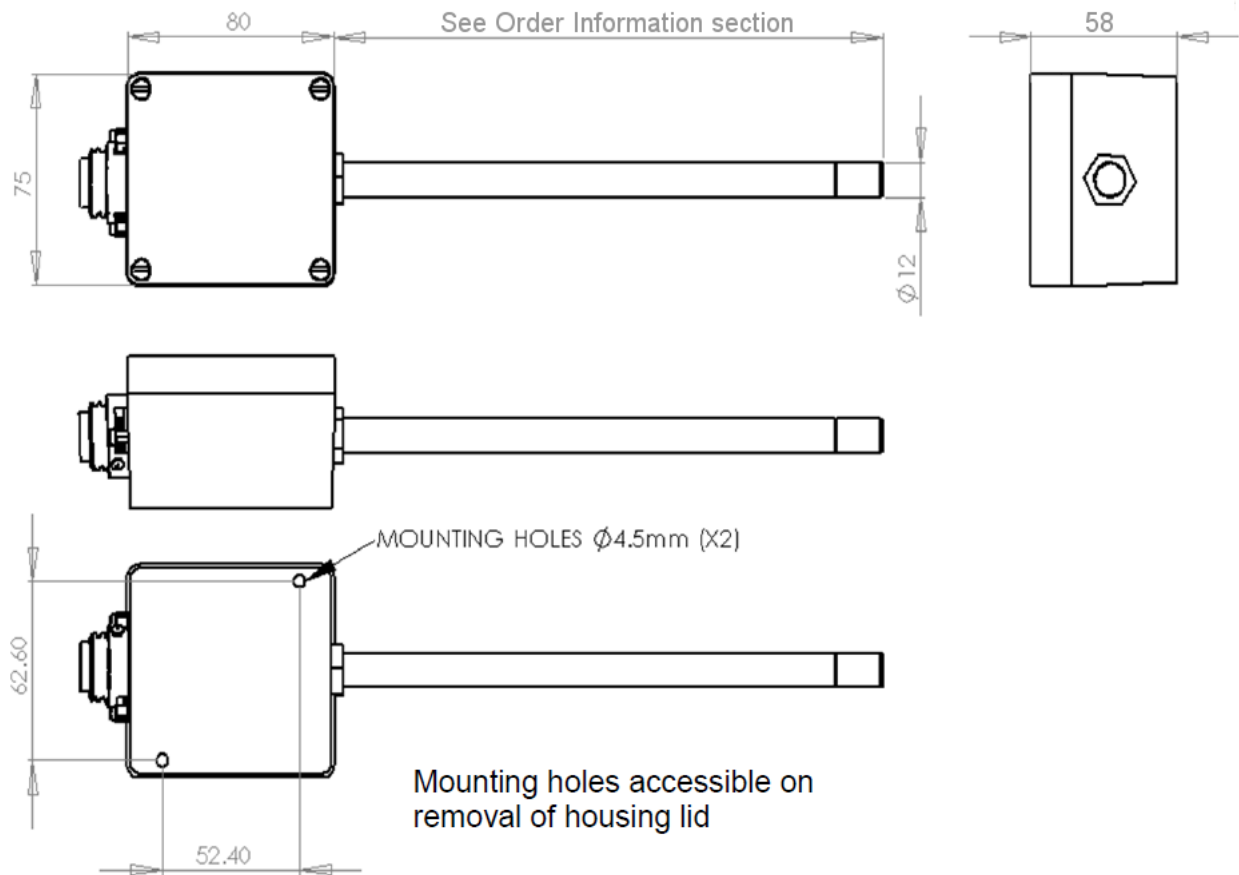




## ELECTRICAL INTERFACE

Housing: Amphenol Ecomate C016 30C006 100 12

Mating Connector: Binder 99-4218-00-07

**NOTE:** Mating connector also supplied.

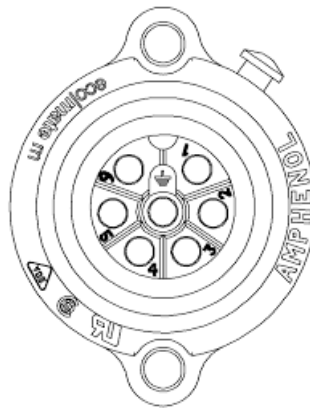



Pin	Assignment
1	24V <sub>DC</sub> ±10%
2	GND
3	Calibrate
4	Cycle
5	4—20mA / RS232 Tx (see Note)
6	0—10V <sub>DC</sub> / RS232 Rx (see Note)
CENTRE	Housing / Probe Earth

**NOTE:** Output pins 5 and 6 are both referenced to the supply GND (pin 2). Due to high current flow in the supply GND, when monitoring the 0—10V<sub>DC</sub> output (pin 6) it is recommended that a separate GND wire for the measurement system is taken from pin 2. This removes errors due to voltage drops in the power supply connections.

Assignment of output pins 5 and 6 selectable by altering the position of the jumper links on the PCB; see [PCB LAYOUT](#) below.




## CIRCUIT DIAGRAM AND PCB LAYOUT

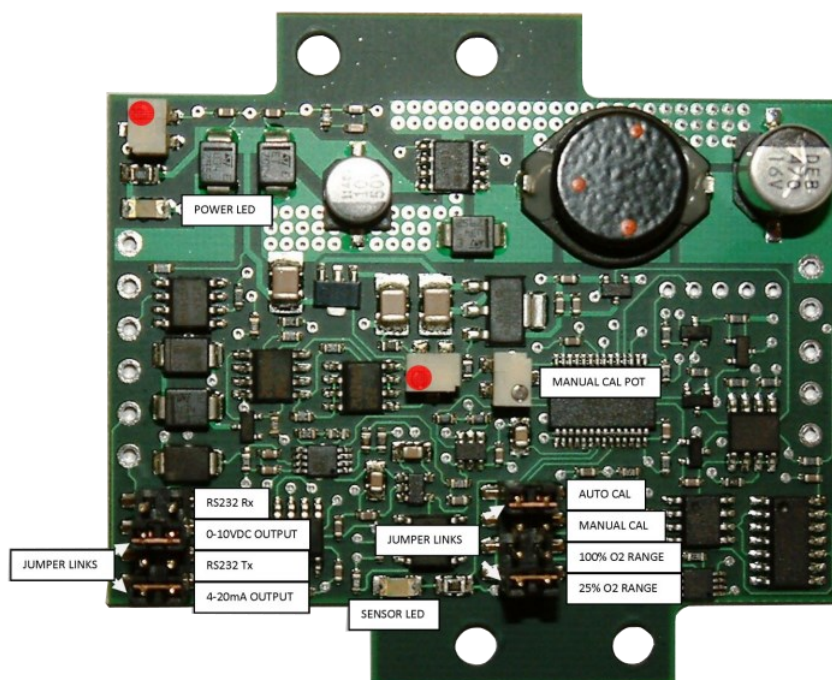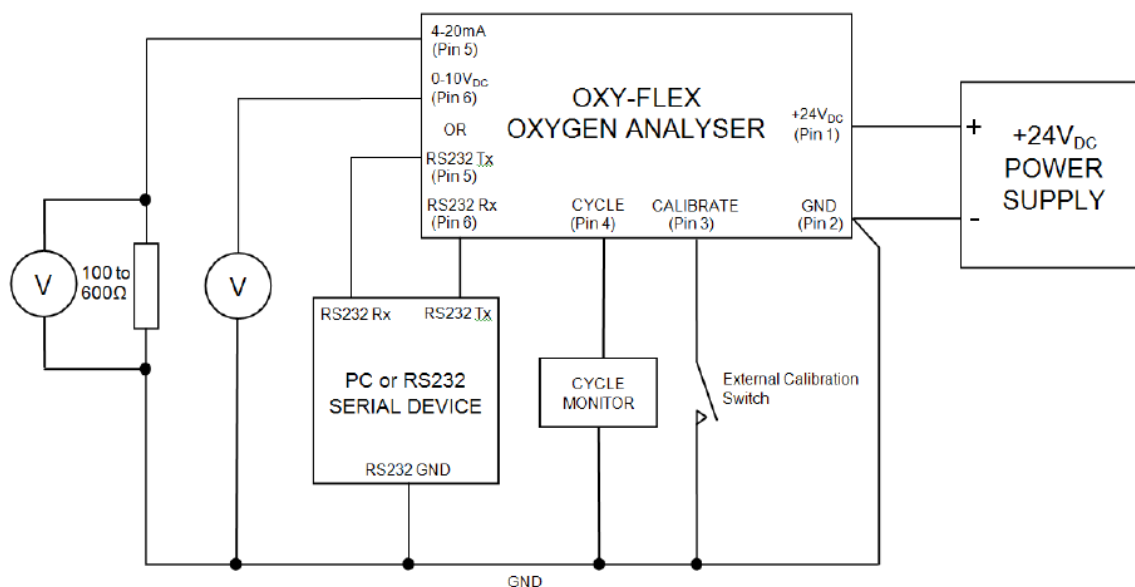

## ORDER INFORMATION

Generate your specific part number using the convention shown below. Use only those letters and numbers that correspond to the options you require — omit those you do not. Include the “OXY-FLEX” prefix.

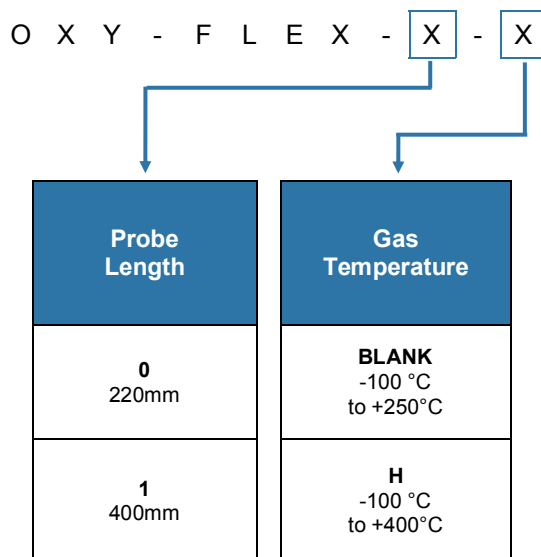

### CAUTION

Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents.

**Failure to comply with these instructions may result in product damage.**

### INFORMATION

#### Notice Warranty:

The sensor module comes with a (90) days warranty starting from the date the sensor was shipped to the buyer.

For more information, visit our website:  
[www.co2meter.com/pages/terms-conditions](http://www.co2meter.com/pages/terms-conditions)

For technical assistance or advice, please email:  
[support@co2meter.com](mailto:support@co2meter.com)

**Contact us:** CO2Meter, Inc. 131 Business Center Drive Ormond Beach, FL 32174 USA