



Downloading with GasLab

1. Download latest version of GasLab software at: <https://www.co2meter.com/pages/downloads>
2. Power on SAN-11 device
3. Wait for 5 second warm up countdown
4. Connect SAN-11 to PC with provided USB Cable
5. Open Gaslab software

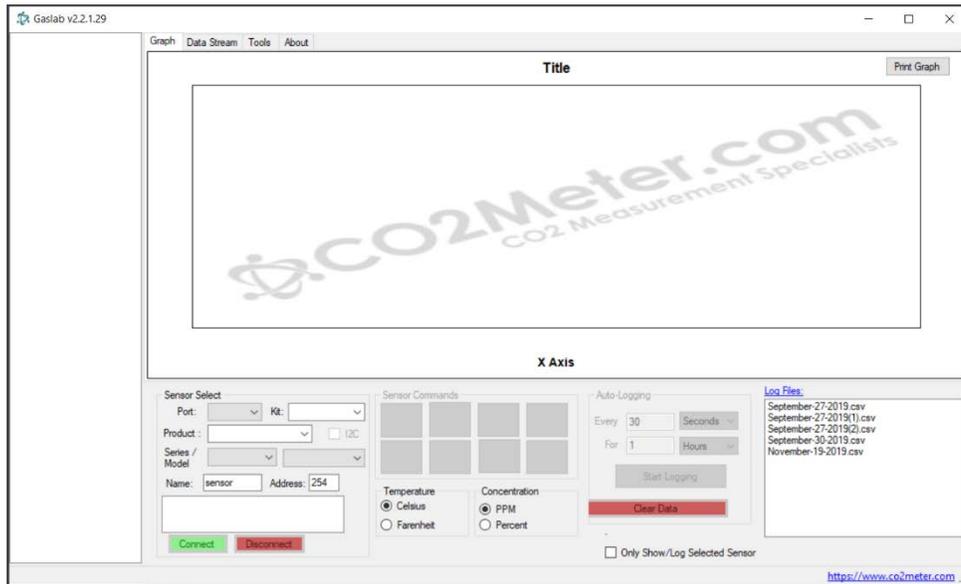


6. Set Sensor Select options.

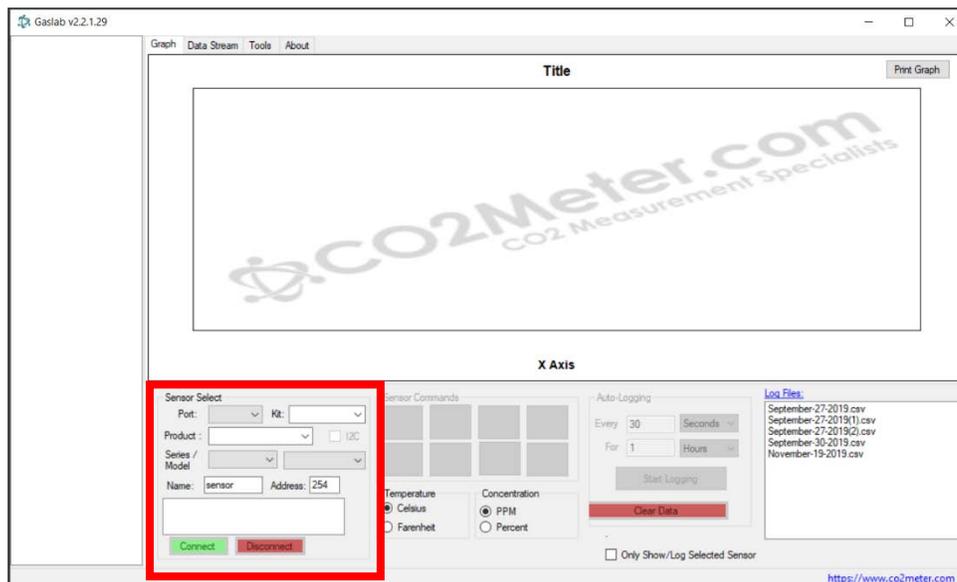


7. Select Port in which your San-11 device is connected.
8. Do not select a Product.
9. Select SAN-XY under Series/Model.
10. Press Connect.

11. When Connected the window should appear as shown bellow:

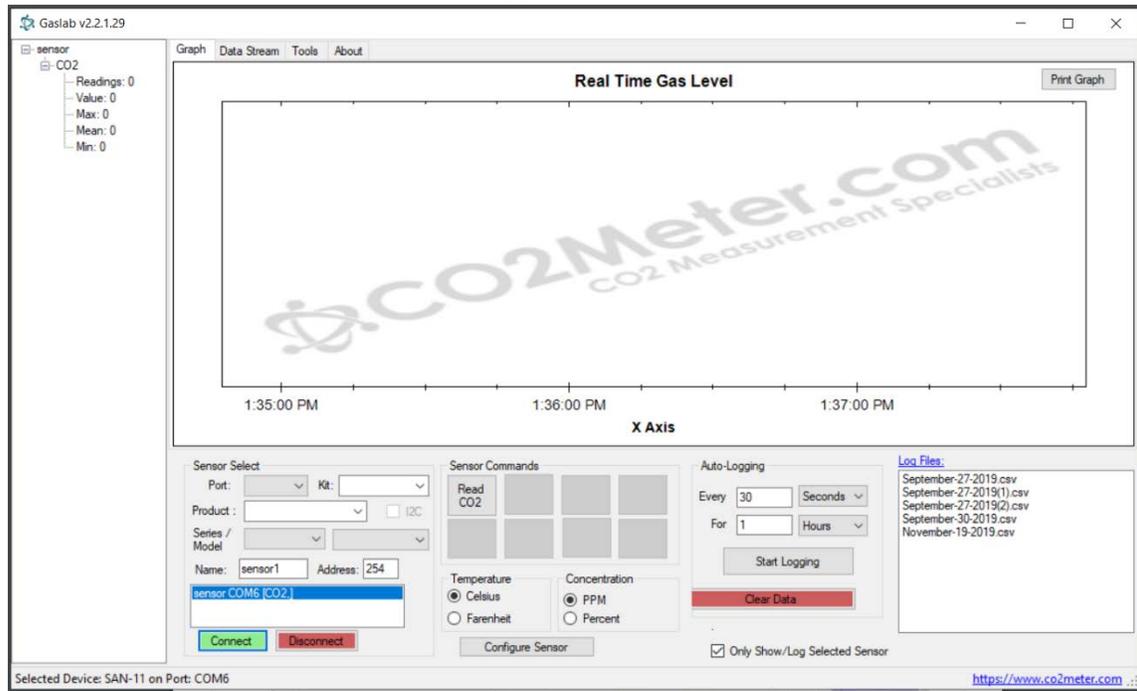


12. Press Configure Sensor and the following page will appear:

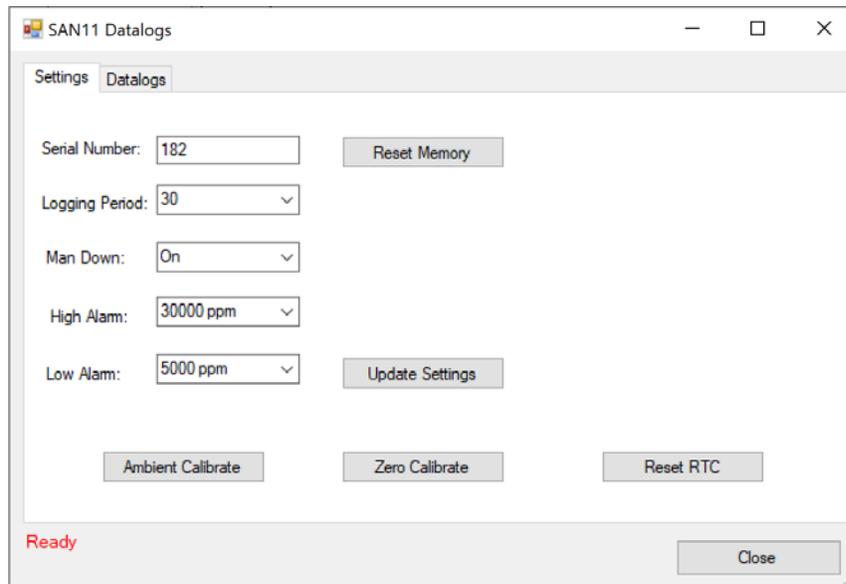

13. Make sure the Serial Number matches the one found on the back of your device.

14. Select the Datalogs tab.

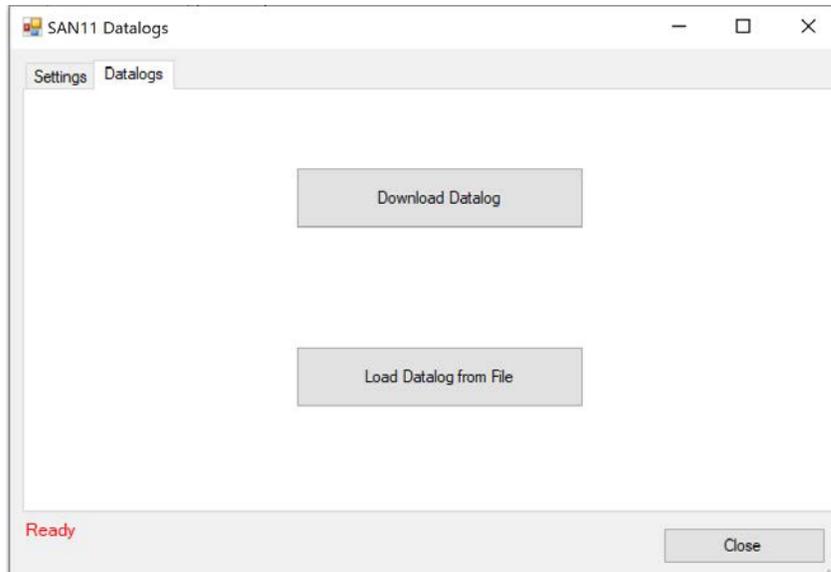

15. Press Download Datalog in order to Name and selects a location to save your file.