

User Manual

iSense Remote Oxygen Safety Alarm



CM-0180 – 25% Oxygen

CM-0181 – 95% Oxygen

Table of Contents

TABLE OF CONTENTS	2
WELCOME	3
IMPORTANT SAFEGUARDS.....	4
DEVICE SPECIFICATIONS	5
PACKAGE CONTENTS	6
GASLAB ® SOFTWARE	6
MINIMUM SYSTEM REQUIREMENTS	7
QUICK START GUIDE	8
DESCRIPTION	11
STANDARD OPERATION.....	11
ENTERING THE SERVICE MENU	12
PERFORMING AN ATMOSPHERIC SPAN CALIBRATION	12
PERFORMING A 0% OXYGEN ZERO POINT CALIBRATION	12
TERMINALS CONNECTORS	13
MODBUS / RS-485	13
INPUT REGISTERS.....	14
HOLDING REGISTERS	14
POWERING THE UNIT	15
LCD DISPLAY	16
THEORY OF OPERATION	16
CALIBRATION	16
CALIBRATING USING MODBUS OR PC CONNECTION	17
SUPPORT.....	20
WARRANTY	20
RETURNS.....	20
LIABILITY	21
CONTACT US	22

Welcome

Thank you for purchasing the iSense Remote Oxygen Safety Alarm. This unit allows you to measure oxygen in inaccessible areas. The iSense is a long life 0-25% oxygen level transmitter that provides multiple analog linear outputs of O₂ concentrations. It's designed to be rugged, maintenance-free and can be calibrated in normal air of any known oxygen concentration.

Our goal is to make high-quality, low-cost gas detection and indoor air quality products available to you.

Please take some time to read through this manual in order to get the most out of your meter. Make sure to visit our website regularly to find more information about this product and to download the software free. Once you download and install the software, you can use the "Check for updates" function under the *Help* menu to search for new updates. Please also pay special attention to the important safeguards shown on the pages ahead.

Important Safeguards

To reduce the risk of fire, electrical shock and/or injury to persons, basic safety precautions should always be followed when using electrical appliances, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING THIS DEVICE!
2. Use only the supplied power supply to operate the unit.
3. Ensure that when sampling in a closed environment that the tubes are securely fashioned to the device.
4. Do not operate with a blocked off sample path.
5. Do not operate the device if it is malfunctioning.
6. Do not install the device outside in exposed conditions. Due to the nature of the design the enclosure cannot be made water-tight and the unit must not be exposed to water.

**SAVE THESE
INSTRUCTIONS!**

Device Specifications

Measuring Range:	25% O2	0-25% vol.
	95% O2	0-95% vol.
Repeatability:	0-25% CO2	± 0.05%, ± 1 % of measured value
	0-95% O2	± 0.02%, ± 1 % of measured value
Accuracy	25% / 95%	±2% full scale
Power Supply:	Maximum Voltage	24VDC
	Minimum Voltage	20VDC
	Power Consumption	600mA @ 24VDC
Sensor Ratings:	Life Expectancy	>15 years
	Maintenance Interval	No maintenance required
	Warm-up Time	<15 min (instant measurements)
Outputs:	Relay	30VDC 1 A / NC and NO contacts
	O2 Output Value	4-20 mA, linearly scaled
	RS-485	Modbus Interface

Package Contents

Please verify that your package contains the following items before using the unit:

Contents:

- (1) Meter
- (1) Certificate of Calibration
- (1) User Manual
- (1) Power supply
- (1) 2 Meter USB to RS-485 Cable
- (1) Screen Breather

GasLab ® Software

Visit CO2Meter.com and go to the “Downloads” page (see link below) to download our GasLab® software free or for more information on how to connect, configure, and calibrate your meter. For general information about the program, please see the *GasLab® User Instruction Manual* included with your meter/sensor. Additional copies of the GasLab® user manual is available at <http://www.co2meter.com/pages/downloads>

IMPORTANT: MAKE SURE TO INSTALL SOFTWARE BEFORE
CONNECTING
YOUR DEVICE TO YOUR COMPUTER

By installing our GasLab® software first, you will ensure that the proper driver necessary for your unit is installed on your computer before connecting your meter. Click on the “Install Now” link and then

select “Run” when prompted by your browser (as shown on Figure 1 below).

Minimum System Requirements

To utilize our free software, your computer must meet the following requirements:

- Windows XP SP3 or higher
- Microsoft .Net Framework 3.5 SP1
- Pentium 4 (or newer) operating at 2.4Ghz or faster
- 1GB of Random Access Memory (RAM)
- Hard disk space with at least 20 Megabytes (MB) free (200+MB recommended for logs and application files)

Software is compatible with 64-bit operating systems and is fully tested with Windows 7.

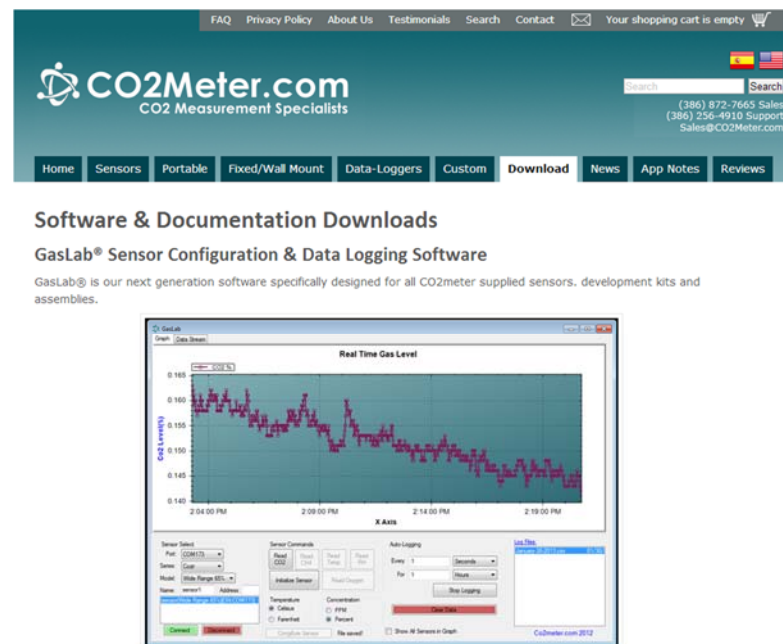


Figure 1: Install GasLab® online (Internet Explorer 9 shown)

Quick Start Guide

Make sure you read through these instructions thoroughly before using your meter. This guide will help you familiarize with your meter in order to be as productive as you need to be in the least amount of time possible.

**Display**

Shows O₂ concentration level and data logging status (optional)

Mute Button

The screamer activates when the values of Oxygen are lower than 19.0% and it will last 30 seconds.

Data M12 Connector

Modbus connection from the remote to the Oxygen Transmitter

USB

Through the USB you can calibrate, collect data in real time, download data and calibrate the unit using D

GasLab® software.

Power Input


Plugging our 24 VDC power supply include, you can Turn ON/OFF the unit.

**Oxygen Transmitter**

Oxygen sensor that's communicates to the remote via Modbus protocol

Barb Fittings

Connect to sampling system for closed loop sampling or diffusion, the unit comes with protectors for the sensor.

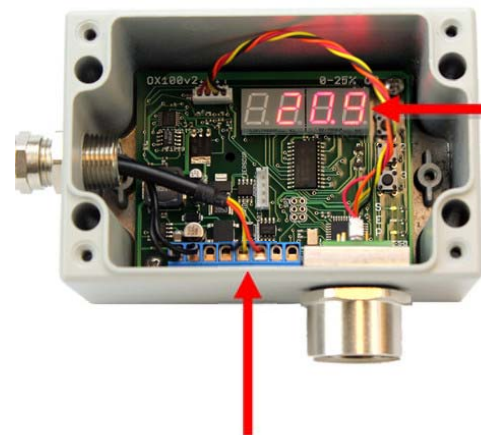**Display**

Shows O₂ concentration level

Sensor Terminals

Connections for 4-20 mA, RS-485, Power and UART

Description

Display – Main interface to view current sensor readings and menu state. Will blink “STRT” upon applying power while the sensor warms up and stabilizes.

LEDs – are in for lower right corner of the unit on the main PCB and are labeled S, E and P.

S LED – Status LED. Blinks every time a complete measurement cycle is performed and the value is updated. Serves as a heartbeat for transmitter operation.

E LED – Error LED. Will light if any abnormal conditions are detected within the device, primarily the sensor falling out of its recommended operating specifications will trigger this lamp.

P LED – Power LED. Will be on continuously when power is applied to the unit.

Buttons - The unit has three surface mount buttons above the LEDs on the PCB. They can be gently and carefully pressed with your finger. These buttons allow you to access all aspects of sensors operation and test or calibrate different functional modules.

Standard Operation

The O2 transmitters come factory calibrated for easy installation. During its life cycle calibration may become periodically necessary. We recommend performing a span O2 calibration every month for guaranteed operation and ensured accuracy. No other calibration is necessary during the life cycle of the sensor.

Entering the Service Menu

To enter the service menu the buttons must be pressed in a factory-set order. This code can be customized before shipment but by default will be 1-2-3. The buttons must be pressed within a half second of each other, else the unit will return to standard operating mode. When in the service menu the unit will not update the current O2 readings. Once you enter the menu the display will read “2222”.

Performing an Atmospheric Span Calibration


1. Allow sensor to stabilize for at least 1 hour
2. Ensure the sensor is exposed to fresh air
3. Enter the service menu
4. Press 2 to enter the Oxygen submenu
5. Press 2 again to perform the atmospheric calibration

Performing a 0% Oxygen Zero Point Calibration

1. Allow sensor to stabilize for at least 1 hour
2. Screw on the calibration adapter
3. Apply N2 calibration gas
4. Wait 5 minutes for stable readings
5. Enter the service menu
6. Press 2 to enter the Oxygen submenu
7. Press 1 to calibrate

Terminals Connectors

1. VDC = G- G+
2. O2 4-20mA = SIG GND
3. RS-485 INTERFACE = A B GND
4. RESET = RST

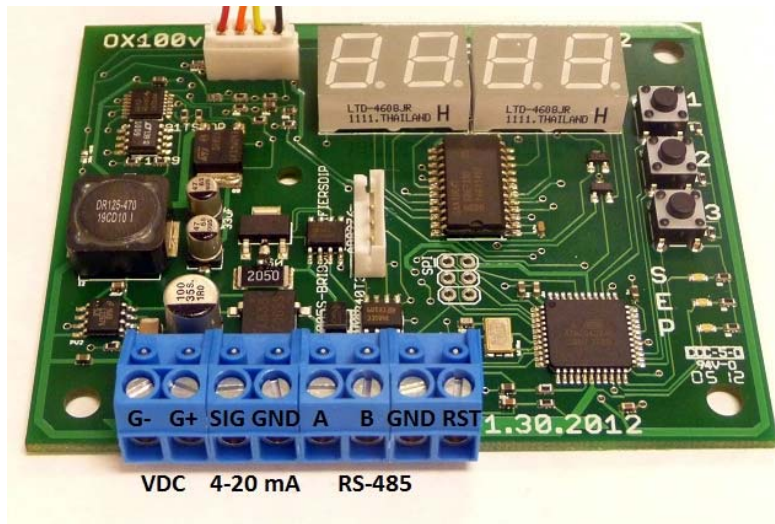

Modbus / RS-485

The sensor supports MODBUS protocols over RS-485 with unidirectional transmission at 9600kbps.

The following Modbus registers are available:

Input Registers

1. O2 Value, x10
2. Raw ADC Value

Holding Registers

1. O2 Span Value (4 byte floating number, part 1)
2. O2 Span Value (4 byte floating number, part 2)
3. O2 Pot Value
4. 4-20mA output Zero Value
5. 4-20mA output Span Value (4 byte floating number, part 1)
6. 4-20mA output Span Value (4 byte floating number, part 2)
7. Control Register
8. Status Register

The following commands are available:

0x03 – Read Holding Register

0x04 – Read Input Register


0x06 – Write Holding Register

Powering the Unit

The unit can be powered by hardwiring 24 VDC power through the MDCM-4FP-2M Cable (included) but sampling units can also be powered by the included 24VDC International wall power supply.



To power the Oxygen transmitter the M12 connector need to be connected to the Remote unit. The outputs for the relay are in the same M12 cable. The relay activates when O₂ go down to 18.5% and desactivate when it reach 20.9%

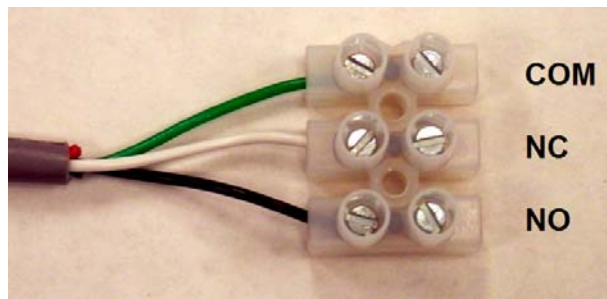

LCD Display

The Liquid Crystal Display (LCD) screen shows the following features:

- CO₂ in percentage format (##.##%) for 100%

Theory of Operation

The zirconia oxygen sensor utilizes solid-state electrochemical reactions to produce a voltage proportional to the current oxygen. This voltage is then digitalized and filtered to a usable value. The oxygen sensor has also been factory calibrated to meet specifications.

Calibration


The calibration process varies depending on the type of unit and whether it has optional data logging functionality or not. All units are factory-calibrated with multiple reference points of gas, and have been verified to be accurate within their specific functionality before shipment. However, if the unit is severely jolted or otherwise mechanically disturbed, the sensor can drift requiring recalibration. All calibration procedures follow a single-point calibration routine that effectively shifts the zero-point of the O₂ sensor.



Calibrating using MODBUS or PC Connection

You can Download the software directly and free from this link in our website. (<http://www.co2meter.com/pages/downloads>)

More precise calibrations can be performed using the PC connection. The unit can be attached to a PC using an optional USB to RS-485 cable, available on our website, or via a mini-USB cable to the internal USB connection. Using the USB cable you can connect the unit to the computer and start configuring through the software GasLab[®].

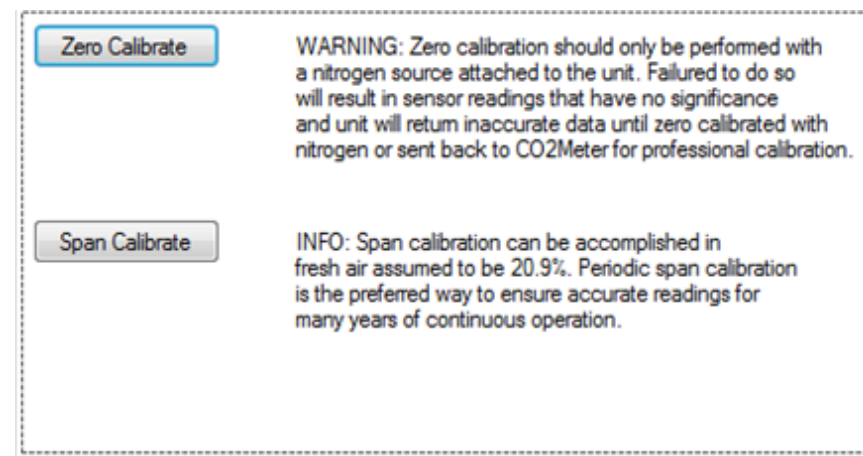

Calibration of the Oxygen Sensor

In the desktop software application O₂ can be calibrated individually. The O₂ sensor can be calibrated to 0% and then to 20.9%.


During normal operation 0% calibration of the oxygen transmitter should not be necessary.

Calibration can also be performed over MODBUS, see additional documentation for MODBUS registers.

Calibration can be performed using either 0% CO₂ calibration gas (typically nitrogen, Argon, etc.), or using a fresh source of air, assumed to be approximately 20.9% O₂.

Attach calibration gas to the unit and connect the unit to a personal computer. Open the calibration screen in the GasLab[®] software. Click the "Calibrate" button in the calibration tab for the desired gas, located in the "Configure Sensor" screen. As long as the gas

concentration is stable, the unit should instantly reflect the calibrated value. This can be confirmed by watching the display. To see the calibration value in real time, click in the “Auto Logging” button to capture these values before opening the configuration screen.

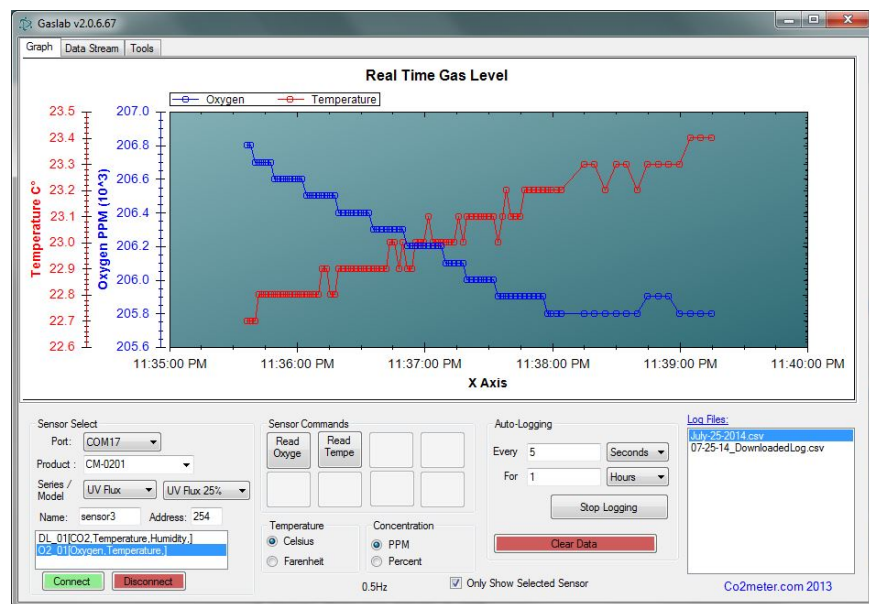

Real-time capture

Zero or Fresh Air Calibration

Apply gas and select the appropriate concentration and Click the “Calibrate” button. The sensor reading should instantly reflect the calibration.

NOTE: DO NOT ADJUST THE SPAN VALUE.

Support

The quickest way to obtain technical support is via email. Please send all support enquires to support@co2meter.com. In your email, please include a clear, concise definition of the problem and any relevant troubleshooting information or steps taken so far, so we can duplicate the problem and quickly respond to your inquiry.

Warranty

This unit comes with a 1YEAR (warranty period) limited manufacturer’s warranty, starting from the date the unit was shipped to the buyer.

During this period of time, CO2Meter.com warrants our products to be free from defects in materials and workmanship when used for their intended purpose and agrees to fix or replace (at our discretion) any part or product that fails under normal use. To take advantage of this warranty, the product must be returned to CO2Meter.com at your expense. If, after examination, we determine the product is defective, we will repair or replace it at no additional cost to you.

This warranty does not cover any products that have been subjected to misuse, neglect, accident, modifications or repairs by you or by a third party. No employee or reseller of CO2Meter.com’s products may alter this warranty verbally or in writing.

Returns

If the product fails under normal use during the warranty period, an RMA (Return Material Authorization) number must be obtained from CO2Meter.com. After the item is received, CO2Meter.com will repair or replace the item at our discretion.

To obtain an RMA number, please call CO2Meter.com at **(877) 678-4259**. When requesting an RMA number, please provide the reason for return and original order number.

If we determine that the product failed due to improper use (water damage, dropping, tampering, electrical damage etc.) or abuse, or if it is beyond the warranty period, we will inform you of the cost to fix or replace your device.

If you are returning your device due to a warranty claim (with an RMA number) and you still have the unit original package, please use it to ship your unit to us. Please make sure to include the provided RMA number on the outside of the box, preferably on the shipping label. Make sure you secure the unit inside the package properly to prevent any damage during transit that could void your device's warranty. Finally, please ship your device to the address shown under the "Contact Us" section below. CO2Meter.com will not, under any circumstances, be responsible for your shipment expenses and no refund will be issued for shipping charges necessary for you to ship the unit to us.

Liability

All liabilities under this agreement shall be limited to the actual cost of the product paid to CO2Meter.com. In no event shall CO2Meter.com be liable for any incidental or consequential damages, lost profits, loss of time, lost sales or loss or damage to data, injury to person or personal property or any other indirect damages as the result of use of our products.


Contact Us

We are here to help!

If the troubleshooting guide above doesn't help you solving your problem or for more information, please contact us using the information below.

 support@co2meter.com

 (386) 872-7665 M-F 9:00am–6:00pm EST

 (866) 422-2356

 www.co2meter.com

Address:
CO2Meter, Inc.
131 Business Center Drive
Ormond Beach, FL 32174