



## NOTICE FROM CO2METER

CO2Meter, Inc. is including these notes about the pump in your unit and its proper operation as reference material. By taking note of these pump specifications and use notes, your company can ensure long term operation of the unit you have purchased.

The information presented in this notice is based on CO2Meter's technical data and test results of similar units. This information is offered as an aid to help in the selection of products and long term care/use of the unit.

CO2meter does not warranty, guarantee, or assume any obligation or liability for any pump or unit containing a pump that is deemed to have exceeded its stated life/hour expectancy, or if it has been operated in a manner inconsistent with the operating recommendations made below.

### About the Pump in Your CM-1000


#### PMP-0010

The PMP-0010 is a 1,000 hr. pump. The pump will last approximately 41 days if run continuously. Avoid use of this pump without filters. If your application involves any of the following items the pump will not function to its full life expectancy: Corrosive gasses, water, condensation, high temperature, and high pressure (no more than 6 PSI).

### Additional Info

For additional information on this pump's operating specifications please visit [www.co2meter.com/products/gas-sampling-pump](http://www.co2meter.com/products/gas-sampling-pump).

CO2Meter recommends that you visit CO2Meter.com to purchase the following items: [Filter & Water Traps for Sensor Pumps](#).

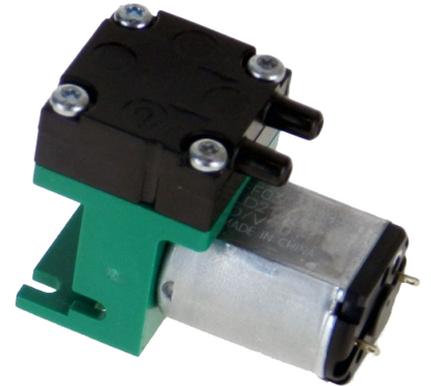

PM-0010



CM-0103



CM-0103-F



CM-0118



CM-0117



CM-0112