


Wire List

Wire	Color	Signal	Connectable Object from	Pin from	Connectable Object to	Pin to
1	Red	PWR	J1	J1P1	J3	J3P2
2	Yellow	Rs232 Rx	J1	J1P2	J2	J2P2
3	Orange	Rs232 TR	J1	J1P3	J2	J2P3
4	Black	Common GND	J1	J1P4	J3	J3P1
5	Blue	Current Output	J1	J1P5	N/A	N/A
6	Black	Common GND	J3	J3P1	J2	J2P5

J1P5 ——— BLUE ——— CURRENT OUTPUT
 J1P2 ——— YELLOW ——— J2P2
 J1P3 ——— ORANGE ——— J2P3
 J1P1 ——— RED ——— J3P2
 J1P4 ——— BLACK ——— J3P1 ——— J2P5

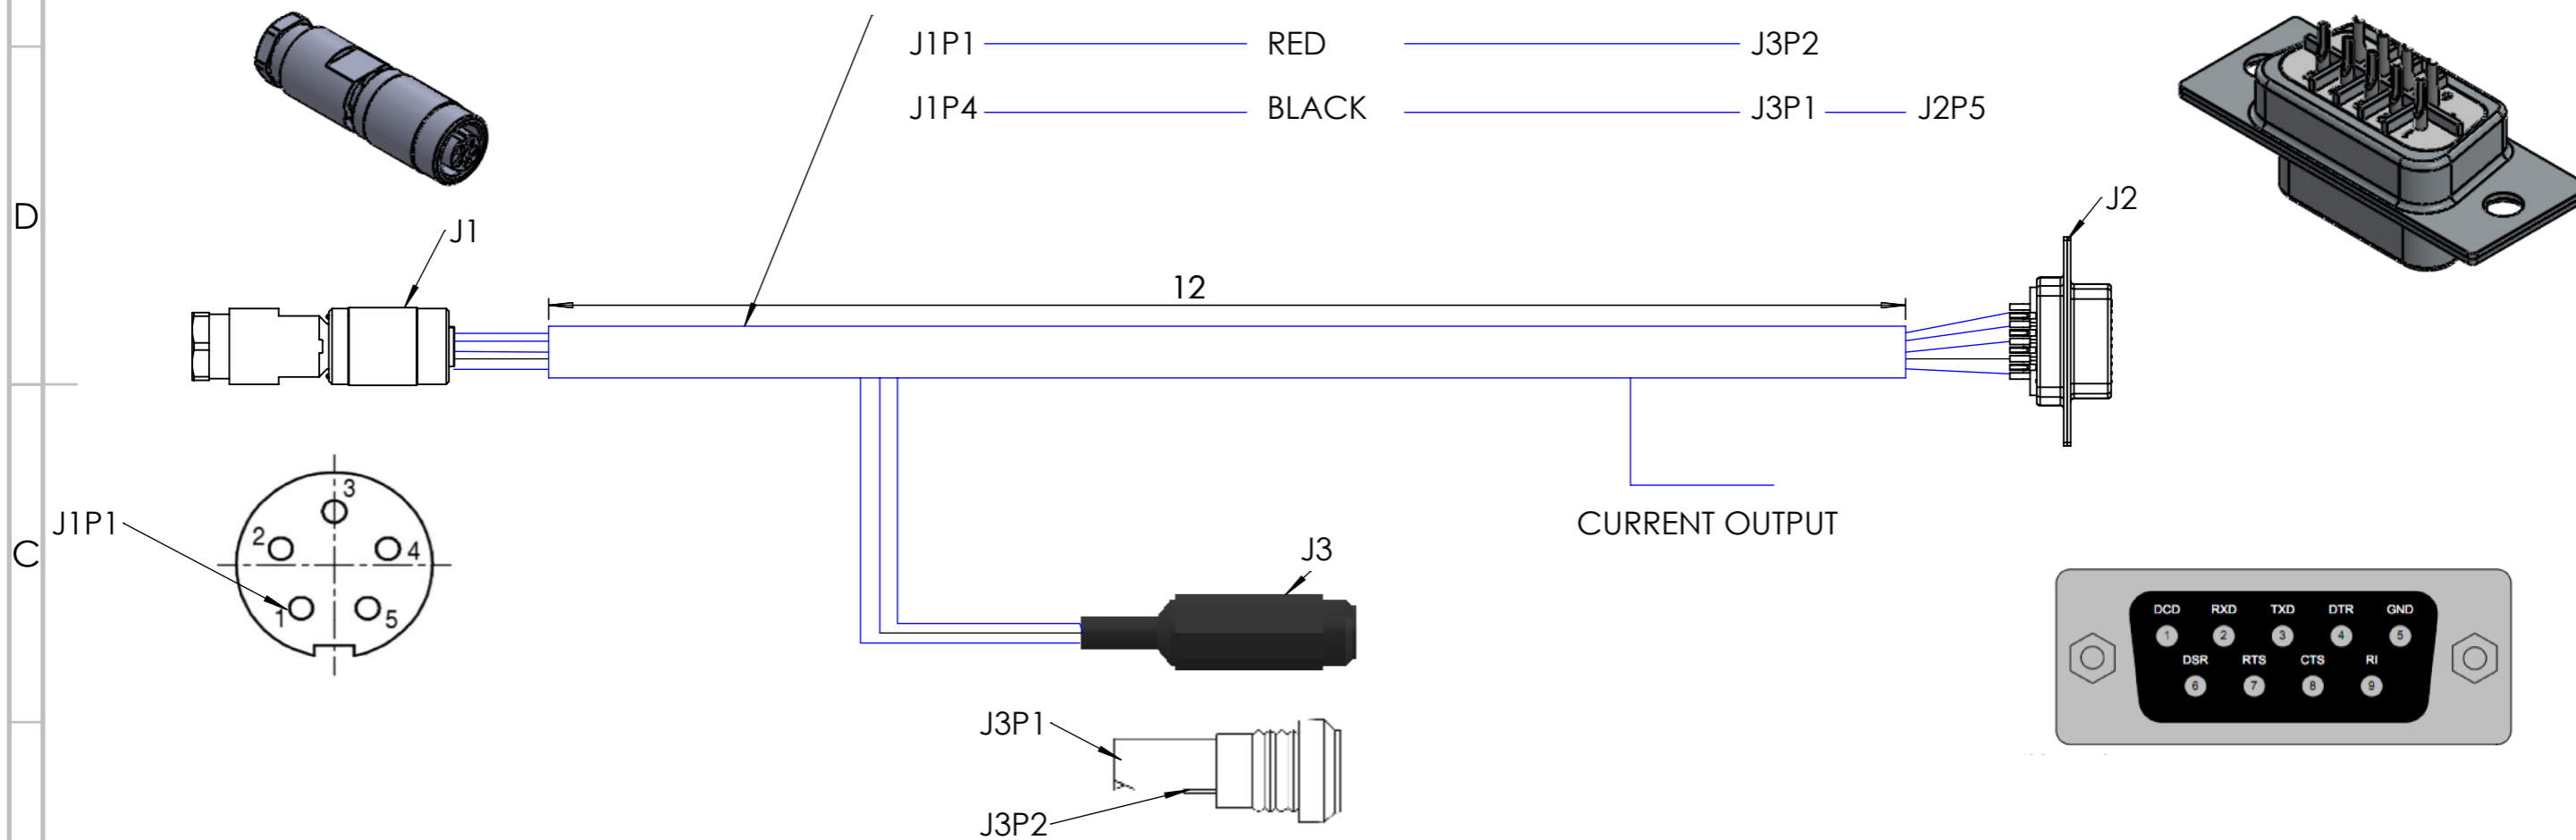

Bill of Materials

ITEM NO.	JACK	DESCRIPTION	QTY.
1	J1	Contacts: 5, female cable connector, cable outlet 3.5-5mm	1
2	J2	10-Set DB9 Male Solder + Plastic Hood	1
3	J4	USB2.0 to RS232 DB 9Pin Female Serial Adaptor(FTDI-FT232RL)	1
4	J3	Vdc Power Receptacle	1

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES				DO NOT SCALE DRAWING		REVISION 1.1	
DRAWN	NAME	SIGNATURE	DATE	<div style="font-size: large; font-weight: bold;">Mico Hybrid Wire Harness</div>			
CHK'D	BWS		11/2019				
APPV'D							
MFG							
Q.A							
				DWG NO.		A3	
				MH10-19-19			
				SCALE:1:2		SHEET 1 OF 1	
				WEIGHT:			