

User Manual



tSENSE (Disp) T RH RL

CO₂-, temperature- and relative humidity transmitter



General

tSENSE (Disp) for wall mounting measures indoor air carbon dioxide concentration, temperature and relative humidity in rooms. *tSENSE (Disp)* is available with or without colour touch display (LCD).

The unit connects to Direct Digital Control (DDC).

Linear outputs are pre-programmed as CO₂-, temperature- and relative humidity transmitter.

Measuring ranges can be modified from PC (Windows) software UIP (version 5 or higher) and USB communication cable, alternative via Modbus or BACnet.

Table of contents

General	1
Table of contents	2
Display Overview	3
Opening of housing	4
Download of software UIP	4
Enter PIN code.....	5
Output Configurations	5
Outputs	6
Out1/Out2/Out3	6
Voltage range	6
Select source	6
Types	7
Measure range settings	7
Relay	8
Communication settings	8
Protocol	8
Address/Baud rate	9
Connection configurations	9
Measured values	10
Display settings.....	11
Limits	11
Chart 24h/Week	11
Screen settings	12
Brightness	12
Background	12
Screensaver, Time setting	12
Toggle (Time and CO ₂ and/or Temperature and/or Humidity)	13
Temperature unit (°C/°F).....	14
Meter information	14
Calibration options CO ₂	15
Zero cal/Background/Target cal	15
ABC	16
Temperature/Humidity Offset	17
Automatic system test.....	18
Error codes and action plans	19
UIP Logger	20
Export Logger Data	20
Log to file	20
PIN codes	21
Change PIN code for access to display settings (PIN1)	21
Toggle PIN1 On/Off.....	21
Change PIN code for access to meter settings (PIN2)	21
Maintenance	22
Directives	22

Display Overview

Will be added.

Opening of housing

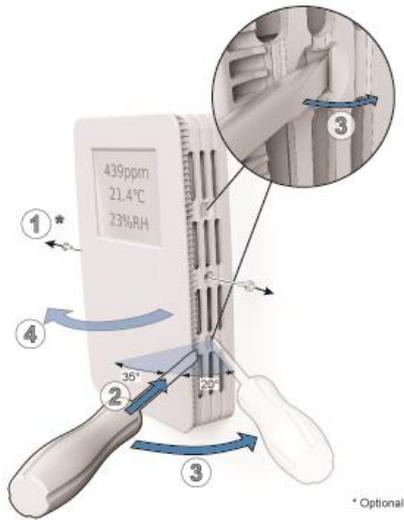


Figure 1

Download of software UIP

senseair.se/products/software/uiip-5/



Figure 2: Connection to PC via phone jack
Connect Interface cable USB – 3.5mm Art.no.:00-0-0070

Check for updates

<p>1</p>	<p>2 New version available</p>	<p>2</p>
<p>3</p>	<p>4</p>	

Enter PIN code

0 Power ON	1	2 PIN1: 1111	3																										
	<table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td colspan="2" style="text-align: center;"></td></tr> </table>	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<table border="1"> <tr><td>Enter PIN</td><td colspan="2">1111</td></tr> <tr><td rowspan="4" style="text-align: center;"></td><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>«</td></tr> </table>	Enter PIN	1111			2	3	5	6	8	9	Del	«	<table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Set</td></tr> <tr><td>Humidity</td><td>«</td></tr> </table>	CO ₂	Screen	Temperature	Set	Humidity	«
CO ₂	429ppm																												
Temperature	23.1°C																												
Humidity	21%RH																												
Enter PIN	1111																												
	2	3																											
	5	6																											
	8	9																											
	Del	«																											
CO ₂	Screen																												
Temperature	Set																												
Humidity	«																												
4 PIN2: 2001	5																												
<table border="1"> <tr><td>Enter PIN</td><td colspan="2">2001</td></tr> <tr><td rowspan="4" style="text-align: center;"></td><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>«</td></tr> </table>	Enter PIN	2001			2	3	5	6	8	9	Del	«	<table border="1"> <tr><td>Meter</td></tr> <tr><td>Measurements</td></tr> <tr><td>Outputs</td></tr> <tr><td>Misc</td><td>«</td></tr> </table>	Meter	Measurements	Outputs	Misc	«											
Enter PIN	2001																												
	2	3																											
	5	6																											
	8	9																											
	Del	«																											
Meter																													
Measurements																													
Outputs																													
Misc	«																												

Output Configurations

Terminal	Default Output	Default Output Range	Outputs of this sensor	Output Ranges of this sensor
OUT(1)	0 - 10 VDC	0 - 2000ppm CO ₂	See label	See label
OUT(2)	0 - 10 VDC	0 - 50°C	See label	See label
OUT(3)	0 - 10 VDC	0 - 100%RH	See label	See label

Table 1. Default output configurations of tSENSE (Disp)

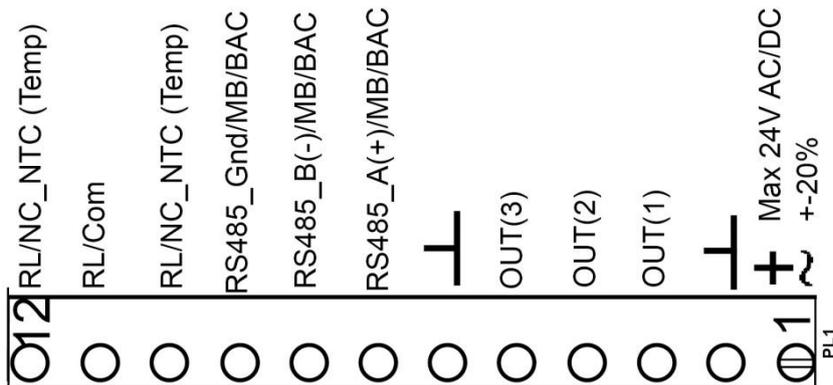


Figure3: Screw Terminal

Connect the sensor to PC with the connect interface cable USB – 3.5mm Art.no.: 00-0-0070

The sensor is supplied with 0 - 10VDC linear outputs for Out(1), Out(2) and Out(3) (see Table 1). Alternative output ranges can be configured with PC software UIP (version 5 or higher). See information at senseair.com.

Outputs

Out1/Out2/Out3

1	2	3	4 Outputs																																	
<table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td colspan="2" style="text-align: center;"></td></tr> </table>	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Set</td></tr> <tr><td>Humidity</td><td>«</td></tr> </table>	CO ₂	Screen	Temperature	Set	Humidity	«	<table border="1"> <tr><td>Enter PIN</td><td colspan="2">2001</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table>	Enter PIN	2001			2	3		5	6		8	9	Del	0	«	<table border="1"> <tr><td>Meter</td></tr> <tr><td>Measurements</td></tr> <tr><td>Outputs</td></tr> <tr><td>Misc</td></tr> </table>	Meter	Measurements	Outputs	Misc
CO ₂	429ppm																																			
Temperature	23.1°C																																			
Humidity	21%RH																																			
CO ₂	Screen																																			
Temperature	Set																																			
Humidity	«																																			
Enter PIN	2001																																			
	2	3																																		
	5	6																																		
	8	9																																		
Del	0	«																																		
Meter																																				
Measurements																																				
Outputs																																				
Misc																																				

Voltage range

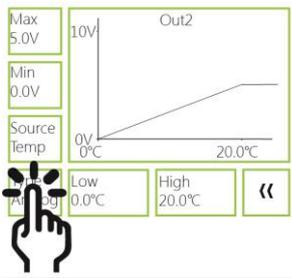
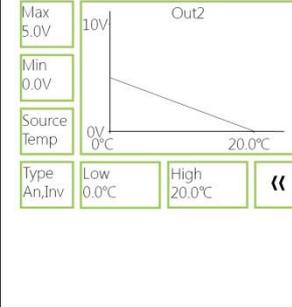
Max (the same approach with "Min")

5 Out2	6	7 Max	8 10.0V, 9.9V..5.0V..																												
<table border="1"> <tr><td>Out1</td><td>10.0V</td></tr> <tr><td>Out2</td><td>4.8V</td></tr> <tr><td>Out3</td><td>4.8V</td></tr> <tr><td>Relay</td><td>1(active)</td></tr> <tr><td colspan="2" style="text-align: center;">«</td></tr> </table>	Out1	10.0V	Out2	4.8V	Out3	4.8V	Relay	1(active)	«		<table border="1"> <tr><td>Out2</td><td>Temp</td></tr> </table>	Out2	Temp	<table border="1"> <tr><td>10V</td><td>Out2</td></tr> <tr><td>0V</td><td>0°C</td></tr> <tr><td>50°C</td><td></td></tr> <tr><td>Source Temp</td><td></td></tr> <tr><td>Type Analog</td><td>Low 0°C</td><td>High 50°C</td><td>«</td></tr> </table>	10V	Out2	0V	0°C	50°C		Source Temp		Type Analog	Low 0°C	High 50°C	«	<table border="1"> <tr><td>Max limit</td><td>5.0V</td></tr> <tr><td colspan="2" style="text-align: center;">+</td></tr> </table>	Max limit	5.0V	+	
Out1	10.0V																														
Out2	4.8V																														
Out3	4.8V																														
Relay	1(active)																														
«																															
Out2	Temp																														
10V	Out2																														
0V	0°C																														
50°C																															
Source Temp																															
Type Analog	Low 0°C	High 50°C	«																												
Max limit	5.0V																														
+																															
9	10	UIP																													
<table border="1"> <tr><td>Max limit</td><td>5.0V</td></tr> <tr><td colspan="2" style="text-align: center;">-</td></tr> <tr><td colspan="2" style="text-align: center;">+</td></tr> </table>	Max limit	5.0V	-		+		<table border="1"> <tr><td>Max 5.0V</td><td>10V</td><td>Out2</td></tr> <tr><td>Min 0.0V</td><td>0V</td><td>0°C</td></tr> <tr><td>50°C</td><td></td><td></td></tr> <tr><td>Source Temp</td><td></td><td></td></tr> <tr><td>Type Analog</td><td>Low 0°C</td><td>High 50°C</td><td>«</td></tr> </table>	Max 5.0V	10V	Out2	Min 0.0V	0V	0°C	50°C			Source Temp			Type Analog	Low 0°C	High 50°C	«								
Max limit	5.0V																														
-																															
+																															
Max 5.0V	10V	Out2																													
Min 0.0V	0V	0°C																													
50°C																															
Source Temp																															
Type Analog	Low 0°C	High 50°C	«																												

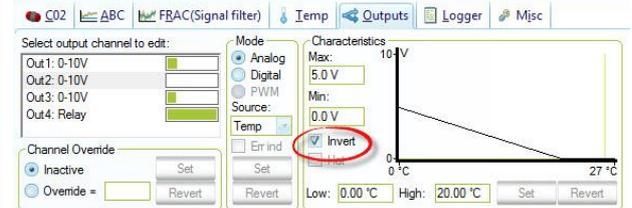
Select source

7 Source	8	9	10																																																											
<table border="1"> <tr><td>Max 5.0V</td><td>10V</td><td>Out2</td></tr> <tr><td>Min 0.0V</td><td>0V</td><td>0°C</td></tr> <tr><td>50°C</td><td></td><td></td></tr> <tr><td>Source Temp</td><td></td><td></td></tr> <tr><td>Type Analog</td><td>Low 0°C</td><td>High 50°C</td><td>«</td></tr> </table>	Max 5.0V	10V	Out2	Min 0.0V	0V	0°C	50°C			Source Temp			Type Analog	Low 0°C	High 50°C	«	<table border="1"> <tr><td>Source</td><td colspan="2">CO2</td></tr> <tr><td>CO</td><td>Temp</td><td>RH</td></tr> <tr><td>Ch1</td><td>Ch4</td><td>Ch5</td></tr> <tr><td>Ch2</td><td>Ch7</td><td>Disable</td></tr> <tr><td colspan="3" style="text-align: center;">«</td></tr> </table>	Source	CO2		CO	Temp	RH	Ch1	Ch4	Ch5	Ch2	Ch7	Disable	«			<table border="1"> <tr><td>Source</td><td colspan="2">CO2</td></tr> <tr><td>CO2</td><td>Temp</td><td>RH</td></tr> <tr><td>Ch3</td><td>Ch4</td><td>Ch5</td></tr> <tr><td>Ch6</td><td>Ch7</td><td>Disable</td></tr> </table>	Source	CO2		CO2	Temp	RH	Ch3	Ch4	Ch5	Ch6	Ch7	Disable	<table border="1"> <tr><td>Max 5.0V</td><td>10V</td><td>Out2</td></tr> <tr><td>Min 0.0V</td><td>0V</td><td>0ppm</td></tr> <tr><td>2000ppm</td><td></td><td></td></tr> <tr><td>Source CO2</td><td></td><td></td></tr> <tr><td>Type Analog</td><td>Low 0ppm</td><td>High 2000ppm</td><td>«</td></tr> </table>	Max 5.0V	10V	Out2	Min 0.0V	0V	0ppm	2000ppm			Source CO2			Type Analog	Low 0ppm	High 2000ppm	«
Max 5.0V	10V	Out2																																																												
Min 0.0V	0V	0°C																																																												
50°C																																																														
Source Temp																																																														
Type Analog	Low 0°C	High 50°C	«																																																											
Source	CO2																																																													
CO	Temp	RH																																																												
Ch1	Ch4	Ch5																																																												
Ch2	Ch7	Disable																																																												
«																																																														
Source	CO2																																																													
CO2	Temp	RH																																																												
Ch3	Ch4	Ch5																																																												
Ch6	Ch7	Disable																																																												
Max 5.0V	10V	Out2																																																												
Min 0.0V	0V	0ppm																																																												
2000ppm																																																														
Source CO2																																																														
Type Analog	Low 0ppm	High 2000ppm	«																																																											
UIP 1 Source CO ₂ selected		2 Set (Save)																																																												

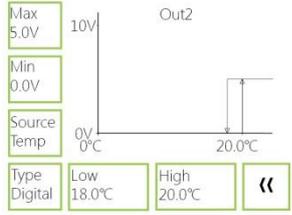
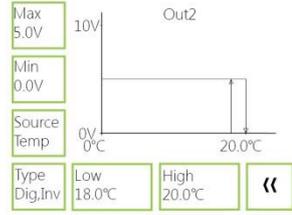
Types
Analogue/Analogue Invert

<p>7 Analogue</p> 	<p>8</p> <p>Type An,Inv</p> <p>Analog Analog Invert</p> <p>Digital Digital Invert</p> <p>«</p>	<p>9</p> <p>Type An,Inv</p> <p>Analog Analog invert</p> <p>Digital Digital invert</p> <p>«</p>	<p>10 Analogue invert</p> 
--	---	---	--

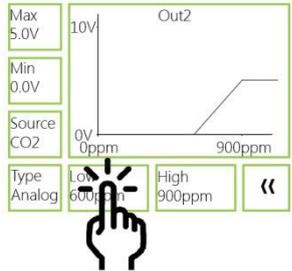
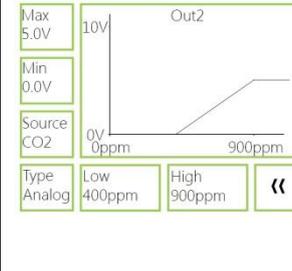
UIP5 **1** Invert **2** Save (Set)



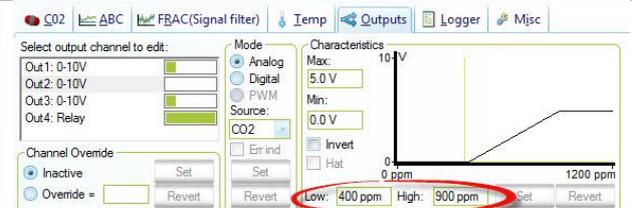
Digital/Digital Invert

<p>10 Digital</p> 	<p>10 Digital Invert</p> 
--	---

Measure range settings
Low (the same approach with "High")

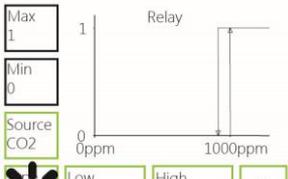
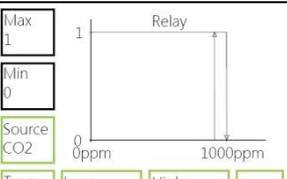
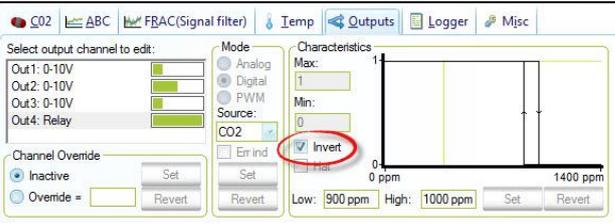
<p>7 Low 600ppm</p> 	<p>8 600, 550...400ppm</p> <p>Low 400ppm</p>  <p>«</p>	<p>9 Low 400ppm</p> <p>Low 400ppm</p> <p>+</p> 	<p>10</p> 
--	--	---	--

UIP



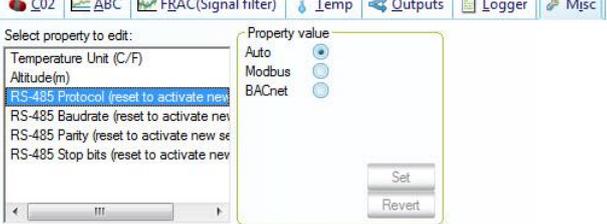
Outputs

Relay

<p>1</p> <p>CO₂ 429ppm Temperature 23.1°C Humidity 21%RH</p> 	<p>2</p> <p>CO₂ Screen Temperature Setup Humidity</p> 	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td></tr> <tr><td></td><td>«</td></tr> </table> 	2	3	5	6	8	9	Del	0		«	<p>4 Outputs</p> <p>Meter Measurements Outputs  Misc «</p>
2	3												
5	6												
8	9												
Del	0												
	«												
<p>5 Relay</p> <p>Out1 10.0V Out2 4.8V Out3 4.8V Relay 1(active)</p> 	<p>6</p> <p>Relay  CO₂</p> <p>«</p>	<p>7 Type Digital</p> <p>Max 1 Min 0 Source CO₂</p>  <p>Low 900ppm High 1000ppm «</p> 	<p>8</p> <p>Type Dig,Inv</p> <p>Digital Digital invert  «</p>										
<p>9</p> <p>Type Dig,Inv</p> <p>Digital Digital invert </p>	<p>10</p> <p>Max 1 Min 0 Source CO₂</p>  <p>Type Low High Dig,Inv 900ppm 1000ppm «</p>	<p>UIP</p> 											

Communication settings

Protocol

<p>5 RS-485</p> <p>Meter info RS-485  PIN1 PIN1  Reset</p> <p>«</p>	<p>6</p> <p>Protocol  Auto Address  10 Baudrate 9600 Parity,Stop bits None,1</p> <p>Reset needed to activate new communication settings «</p>	<p>7 NOTE!</p> <p>Protocol Auto</p> <p> Modbus BACnet</p> <p>«</p>	<p>8</p> <p>Protocol Auto</p> <p>Auto Modbus BACnet </p>
<p>9 NOTE!</p> <p>Meter info RS-485 PIN1 PIN2 Reset </p> <p>«</p>	<p>UIP 1</p> 		<p>2</p> <p>Property value</p> <p>Auto Modbus BACnet</p> <p>Set Revert</p>

Address/Baud rate

<p>6</p>	<p>7</p>	<p>8</p>	<p>9 NOTE!</p>
<p>UIP Address 1</p>	<p>2</p>	<p>3</p>	
<p>UIP Baud rate 1 Misc</p>	<p>2</p>	<p>3</p>	

Connection configurations

<p>1</p>	<p>2 ModBus 3 Choose SenseAir Cable if bought from SenseAir, otherwise choose COM Port 4 Save</p>
<p>5 Lower right corner of screen</p>	<p>6</p>

NOTE!

UIP baud rate \neq RS-485 baud rate if *tSENSE (Disp)* is connected via *phone jack* (see fig. 2).

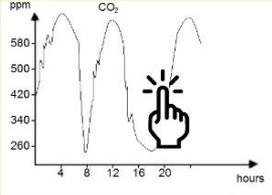
UIP baud rate = RS-485 baud rate if *tSENSE (Disp)* is connected via *screw terminal* (see fig. 3).

RS-485 Protocol parameter set to "Auto": the sensor selects protocol depending on the protocol used on the network it is connected to. After power on the sensor then listens to the traffic on the RS-485 network. If the sensor detects valid BACnet or Modbus messages the sensor will start to use the detected protocol.

Change communication settings via UIP requires Reset (Power OFF – Power ON) to be executed.

Measured values

CO₂/Temperature/Humidity

<p>1</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">CO₂</div> <div style="border: 1px solid black; padding: 2px;">429ppm</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Temperature</div> <div style="border: 1px solid black; padding: 2px;">23.1°C</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Humidity</div> <div style="border: 1px solid black; padding: 2px;">21%RH</div> </div> <div style="text-align: center; margin-top: 5px;">  </div>	<p>2</p> <div style="text-align: center;"> <p>CO₂</p> <p style="font-size: 2em;">429</p> <p>ppm</p> </div>	<p>3</p> <div style="text-align: center;">  </div>	<p>4</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">CO₂</div> <div style="border: 1px solid black; padding: 2px;">429ppm</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Temperature</div> <div style="border: 1px solid black; padding: 2px;">23.1°C</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Humidity</div> <div style="border: 1px solid black; padding: 2px;">21%RH</div> </div> <div style="text-align: center; margin-top: 5px;">  </div>
<p>5</p> <div style="text-align: center;"> <p>CO₂</p> <p style="font-size: 1.5em;">429ppm</p> <p>Temperature</p> <p style="font-size: 1.5em;">23.1°C</p> <p>Humidity</p> <p style="font-size: 1.5em;">21%RH</p> </div>	<p>6</p> <div style="text-align: center;"> <p>CO₂</p> <p style="font-size: 2em;">429</p> <p>ppm</p> </div>	<p>7</p> <div style="text-align: center;"> <p>Temperature</p> <p style="font-size: 2em;">23.1</p> <p>°C</p> </div>	<p>8</p> <div style="text-align: center;"> <p>Humidity</p> <p style="font-size: 2em;">21.0</p> <p>%RH</p> </div>
<p>9</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">CO₂</div> <div style="border: 1px solid black; padding: 2px;">429ppm</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Temperature</div> <div style="border: 1px solid black; padding: 2px;">23.1°C</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;">Humidity</div> <div style="border: 1px solid black; padding: 2px;">21%RH</div> </div> <div style="text-align: center; margin-top: 5px;">  </div>			

Display settings

Limits

CO₂/(Temperature)/(Humidity)

CO₂ Orange/Red limit (Temp./Humidity, the same approach as for CO₂ limit settings)

<p>1</p>	<p>2</p>	<p>3</p>	<p>4 100,200...700ppm</p>
<p>CO₂ red limit 1000ppm RH orange limit 70%RH</p>	<p>CO₂ red limit 1000ppm</p>	<p>RH orange limit 70%RH</p>	

Chart 24h/Week

<p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>

Screen settings

1	2

Brightness

3	4 10, 20,...50%

Background

3	4	5	6

Screensaver, Time setting

Interval

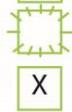
3	4	5 3,4,5... 10 s	6 50 s

Toggle (Time and CO₂ and/or Temperature and/or Humidity)

Toggle time

<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area «</p> 	<p>4</p> <p>Toggle Time 3s  </p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X «</p>	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂ X</p> <p>Temperature X</p> <p>Humidity X </p>	<p>6</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area </p>
<p>7</p> <p>CO₂ Screen</p> <p>Temperature Settings</p> <p>Humidity</p> 	<p>8 Check</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C </p> <p>Humidity 21.0%RH </p> <p></p>	<p>9</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C </p> <p>Humidity 21.0%RH </p> <p></p>	<p>10 3 s</p> <p>CO₂ 429 ppm</p>
<p>11 3 s</p> <p>Temperature 23.1 °C</p>	<p>12 3 s</p> <p>Humidity 21.0 %RH </p>	<p>13</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21.0%RH</p> <p></p>	

Toggle CO₂ and/or Temperature and/or Humidity

<p>3</p> <p>Brightness 50%</p> <p>Background Normal</p> <p>Display Scheme Interval</p> <p>Toggle Ind area «</p> 	<p>4</p> <p>Toggle Time 3s - +</p> <p>CO₂ </p> <p>Temperature </p> <p>Humidity X «</p>	<p>5</p> <p>Toggle Time 3s - +</p> <p>CO₂ </p> <p>Temperature X</p> <p>Humidity X </p>	<p>6</p> <p>CO₂ 429ppm</p> <p>Temperature 23.1°C </p> <p>Humidity 21.0%RH </p>
<p>7 Will NOT show up</p> <p>CO₂ 429 ppm</p>	<p>8 3 s</p> <p>Temperature 23.1 °C</p>	<p>9 3 s</p> <p>Humidity 21.0 %RH</p>	

Temperature unit (°C/°F)

<p>1</p> <p>CO₂ 429ppm Temperature 23.1°C Humidity 21%RH</p> <p></p>	<p>2</p> <p>CO₂ Screen Temperature Settings Humidity</p> <p>«</p>	<p>3</p> <p>Yellow limit 30°C Red limit 40°C Chart Week</p> <p>Unit «</p>	<p>4</p> <p>Temperature Units °F</p> <p>Celsius Fahrenheit</p>
<p>1 UIP Miscellaneous</p>		<p>2</p>	

Meter information

<p>1</p> <p>CO₂ 429ppm Temperature 23.1°C Humidity 21%RH</p> <p></p>	<p>2</p> <p>CO₂ Screen Temperature Settings Humidity</p> <p>«</p>	<p>3</p> <p>Enter PIN 2001</p> <table border="1"> <tr><td>2</td><td>3</td></tr> <tr><td>5</td><td>6</td></tr> <tr><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0 «</td></tr> </table>	2	3	5	6	8	9	Del	0 «	<p>4</p> <p>Meter Measurements Outputs Misc «</p>		
2	3												
5	6												
8	9												
Del	0 «												
<p>5</p> <p>Meter info RS-485 PIN1 PIN2 Reset</p> <p>«</p>	<p>6</p> <p>Meter information</p> <table border="1"> <tr><td>Meter status</td><td>0x0</td></tr> <tr><td>Version</td><td>1.06</td></tr> <tr><td>Serial Number</td><td>0x30DA676</td></tr> <tr><td>Type ID</td><td>404</td></tr> <tr><td>Map Version</td><td>72</td></tr> </table> <p>«</p>	Meter status	0x0	Version	1.06	Serial Number	0x30DA676	Type ID	404	Map Version	72	<p>UIP</p>	
Meter status	0x0												
Version	1.06												
Serial Number	0x30DA676												
Type ID	404												
Map Version	72												

Calibration options CO₂

4	5
Meter	CO ₂ 429ppm
Measurements	Temperature 23.1°C
Outputs	Humidity 21%RH
Misc	

Zero cal/Background/Target cal

6	7	8	9
Zero ABC Background Altitude Target cal Restore cal	Start zero calibration cycle? Yes No Zero calibration in use 0ppm calibration target, calibration cycle takes ~5	Zero calibration active	Verifying
10	11	UIP: If reference meter shows e.g. CO ₂ -value 500ppm set Target to 500	
Zero calibration succeeded	Zero cal ABC Background Altitude Target cal Restore cal		

Background calibration button

1 Press for 15s, until...	2 green LED blinks twice

ABC
Enable/Disable

<p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>5</p>	<p>6</p>	<p>7</p>	<p>8</p>
<p>9 Save</p>	<p>UIP</p>		

ABC period (ABC target/Altitude (msl)/Restore cal)

<p>5</p> <p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p>«</p>	<p>6</p> <p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p> <p>«</p>	<p>7</p> <p>ABC Inactive</p> <p>ABC period 180hours</p> <p>ABC target 380ppm</p> <p>«</p>	<p>8</p> <p>ABC period 180 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>
<p>9</p> <p>ABC period 240 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>	<p>10 180, 181, 240hours</p> <p>ABC period 240 hours</p> <p>- +</p> <p>Save new ABC period?</p> <p>Yes No</p> <p>«</p>	<p>11 Save</p> <p>Saving ABC period</p> <p> </p>	<p>12</p> <p>Verifying</p> <p> </p>
<p>13</p> <p>ABC period set to 240 hours</p>	<p>1 4</p> <p>Zero cal ABC</p> <p>Background Altitude</p> <p>Target cal Restore cal</p> <p>«</p>	<p>UIP</p>	

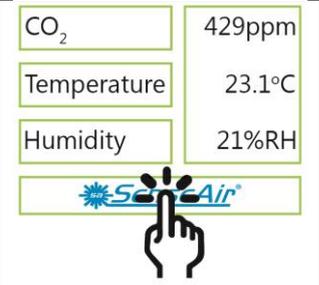
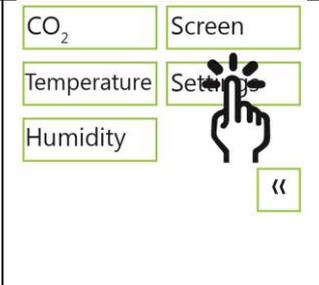
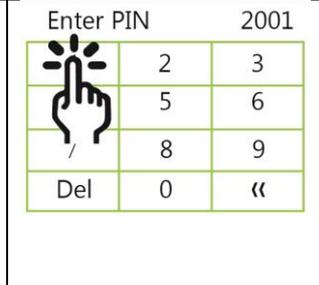
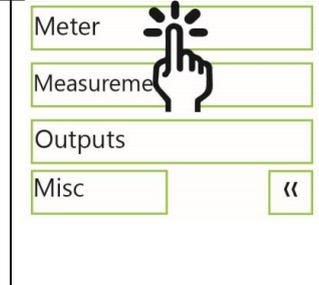
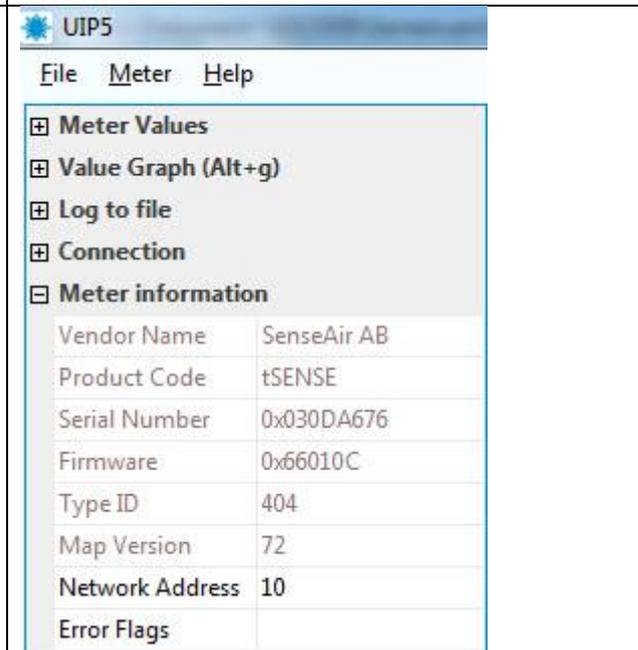
Temperature/Humidity Offset

<p>5</p> <p>CO2 429ppm</p> <p>Temperature 23.1°C</p> <p>Humidity 21%RH</p> <p>«</p>	<p>6 0.0..-0.1...-0.2°C</p> <p>Temperature offset -2.5°C</p> <p>+ -</p> <p>«</p>	<p>7</p> <p>Temperature offset -2.5°C</p> <p>- +</p> <p>«</p>
--	---	--

Automatic system test

A full system test is executed automatically at every power-up. Sensor probes are checked constantly during operation against failure by checking valid dynamic measurement ranges.

System checks returns error bytes to RAM. Error codes are available by connecting the sensors to a PC with a special USB cable (art.no. 00-0-0070) connected (see fig. 2). Error codes are shown in the display at "Meter status" and in software UIP (version 5 or higher).

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>5</p> 	<p>6</p> 	<p>UIP</p> 	

Error codes and action plans

Error symbol (a wrench appears when one or several error codes are active)



Bit #	Error code	Error description	Suggested action
0	CO ₂ sensor Com. error	No ability to communicate with CO ₂ sensor module.	Try to restart sensor by power OFF - power ON. Contact local distributor.
1	CO ₂ sensor CO ₂ measure error	CO ₂ measurement error.	Try Background calibration ("Calibration options CO ₂ " p.16). Contact local distributor. <i>See Note 1!</i>
2	T sensor T measure error	Temp measurement error.	Try to restart sensor by power OFF - power ON. Contact local distributor.
3	RH/T sensor com error	No ability to communicate with RH/T sensor module.	
4	RH/T sensor RH measure error	RH measurement error.	
5	RH/T sensor T measure error	Temp measurement error, sensor will use CO ₂ sensor temperature if RH/T Temperature is unavailable. S_Temp will be set to NTC_Temp.	
6			
7			
8	Output config. error	Error in output configuration. Output is still updated, i.e. can be 0-10V	Check connections and loads of outputs. Check detailed settings and configuration with UIP software version 5 or higher. Contact local distributor.
9	Memory error	One or several bytes of sensors parameter memory (settings) are corrupt	Try to restart sensor by power OFF/ON Contact local distributor.

Table 2: Error codes and action plans.

NOTE!

Occurs if probe is out of range, at very high CO₂ values. Error code resets automatically when measured values returns to normal. May also indicate need of zero point calibration. If CO₂ values are normal and error code remains, the sensor can be defect or the connections to it are broken.

If several errors are detected at the same time, different error code numbers will be added together into one single error code!

Sensor accuracy is defined at continuous operation (at least three (3) weeks after installation).

UIP Logger Alternative 1

1 Start to Read Log Data from sensor	2 Records for compability between UIP and other sensor types. NOTE! Sensor has no timer.
	<p>1 Measurement Start. Record added by UIP for compatibility between UIP and other sensor types. Status = dummy value Timestamp = dummy value 2 Oldest data record in log, average values for 15 minutes 3 Average values for 15 minutes after point 2 4 Measurement end. Record added to readout by UIP Status = dummy value Timestamp = time log was read from sensor</p>

NOTE!

The sensor has no Real-time clock, if the sensor has not been powered on continuously, time between data points can be much longer than 15 minutes.

Export Logger Data

1	2 Options	<table border="1"> <thead> <tr> <th>Status</th> <th>Type</th> <th>CO2 (ppm)</th> <th>Temp (°C)</th> <th>RH (%)</th> </tr> </thead> <tbody> <tr> <td>0xFF</td> <td>Measurement_Start, t=2015-01-01</td> <td>00:00:00</td> <td></td> <td></td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>574</td> <td>21.46</td> <td>327.66</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>578</td> <td>21.50</td> <td>25.01</td> </tr> <tr> <td>0xFF</td> <td>Data</td> <td>579</td> <td>21.51</td> <td>25.08</td> </tr> </tbody> </table>	Status	Type	CO2 (ppm)	Temp (°C)	RH (%)	0xFF	Measurement_Start, t=2015-01-01	00:00:00			0xFF	Data	574	21.46	327.66	0xFF	Data	578	21.50	25.01	0xFF	Data	579	21.51	25.08
Status	Type	CO2 (ppm)	Temp (°C)	RH (%)																							
0xFF	Measurement_Start, t=2015-01-01	00:00:00																									
0xFF	Data	574	21.46	327.66																							
0xFF	Data	578	21.50	25.01																							
0xFF	Data	579	21.51	25.08																							

Alternative 2 Log to file

1 Start log to file on PC															
2															
3 <table border="1"> <thead> <tr> <th>Time</th> <th>Offset ÅmsÅ</th> <th>Temperature Å0CÅ</th> <th>CO2 Value ÅppmÅ</th> <th>Relative Humidity Å%Å</th> </tr> </thead> <tbody> <tr> <td>2015-11-17 13:11:58</td> <td>9149974</td> <td>685.00</td> <td>24.36</td> <td>24.36</td> </tr> <tr> <td>2015-11-17 13:12:03</td> <td>9154919</td> <td>685.00</td> <td>24.31</td> <td>24.36</td> </tr> </tbody> </table>	Time	Offset ÅmsÅ	Temperature Å0CÅ	CO2 Value ÅppmÅ	Relative Humidity Å%Å	2015-11-17 13:11:58	9149974	685.00	24.36	24.36	2015-11-17 13:12:03	9154919	685.00	24.31	24.36
Time	Offset ÅmsÅ	Temperature Å0CÅ	CO2 Value ÅppmÅ	Relative Humidity Å%Å											
2015-11-17 13:11:58	9149974	685.00	24.36	24.36											
2015-11-17 13:12:03	9154919	685.00	24.31	24.36											

PIN codes

1	2	3	4																																					
<table border="1"> <tr><td>CO₂</td><td>429ppm</td></tr> <tr><td>Temperature</td><td>23.1°C</td></tr> <tr><td>Humidity</td><td>21%RH</td></tr> <tr><td colspan="2" style="text-align: center;"></td></tr> </table> 	CO ₂	429ppm	Temperature	23.1°C	Humidity	21%RH			<table border="1"> <tr><td>CO₂</td><td>Screen</td></tr> <tr><td>Temperature</td><td>Settings</td></tr> <tr><td>Humidity</td><td></td></tr> </table> 	CO ₂	Screen	Temperature	Settings	Humidity		<table border="1"> <tr><td>Enter PIN</td><td colspan="2">2001</td></tr> <tr><td></td><td>2</td><td>3</td></tr> <tr><td></td><td>5</td><td>6</td></tr> <tr><td></td><td>8</td><td>9</td></tr> <tr><td>Del</td><td>0</td><td>«</td></tr> </table> 	Enter PIN	2001			2	3		5	6		8	9	Del	0	«	<table border="1"> <tr><td>Meter</td><td></td></tr> <tr><td>Measurements</td><td></td></tr> <tr><td>Outputs</td><td></td></tr> <tr><td>Misc</td><td>«</td></tr> </table>	Meter		Measurements		Outputs		Misc	«
CO ₂	429ppm																																							
Temperature	23.1°C																																							
Humidity	21%RH																																							
																																								
CO ₂	Screen																																							
Temperature	Settings																																							
Humidity																																								
Enter PIN	2001																																							
	2	3																																						
	5	6																																						
	8	9																																						
Del	0	«																																						
Meter																																								
Measurements																																								
Outputs																																								
Misc	«																																							

Change PIN code for access to display settings (PIN1)

5 PIN1	6 (Default 0000)	7																																										
<table border="1"> <tr><td>Meter info</td><td>RS-485</td></tr> <tr><td>PIN1</td><td>PIN2</td></tr> <tr><td>Reset</td><td></td></tr> </table> 	Meter info	RS-485	PIN1	PIN2	Reset		<p>Pin code for access to display settings</p> <table border="1"> <tr><td>PIN</td><td>2</td><td>4</td><td>9</td><td>1</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> <table border="1"> <tr><td>PIN On/Off</td><td>Save</td><td>«</td></tr> </table> 	PIN	2	4	9	1	On	+	+	+	+		-	-	-	-	PIN On/Off	Save	«	<p>Pin code for access to display settings</p> <table border="1"> <tr><td>PIN</td><td>2</td><td>4</td><td>9</td><td>1</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> <table border="1"> <tr><td>PIN On/Off</td><td></td><td>«</td></tr> </table>	PIN	2	4	9	1	On	+	+	+	+		-	-	-	-	PIN On/Off		«
Meter info	RS-485																																											
PIN1	PIN2																																											
Reset																																												
PIN	2	4	9	1																																								
On	+	+	+	+																																								
	-	-	-	-																																								
PIN On/Off	Save	«																																										
PIN	2	4	9	1																																								
On	+	+	+	+																																								
	-	-	-	-																																								
PIN On/Off		«																																										

Toggle PIN1 On/Off

6	7																																				
<p>Pin code for access to display settings</p> <table border="1"> <tr><td>PIN</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> <table border="1"> <tr><td>PIN On/Off</td><td>Save</td><td>«</td></tr> </table> 	PIN	0	0	0	0	On	+	+	+	+		-	-	-	-	PIN On/Off	Save	«	<p>Pin code for access to display settings</p> <table border="1"> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> <table border="1"> <tr><td>PIN On/Off</td><td></td><td>«</td></tr> </table>	PIN	1	0	0	0	On	+	+	+	+		-	-	-	-	PIN On/Off		«
PIN	0	0	0	0																																	
On	+	+	+	+																																	
	-	-	-	-																																	
PIN On/Off	Save	«																																			
PIN	1	0	0	0																																	
On	+	+	+	+																																	
	-	-	-	-																																	
PIN On/Off		«																																			

Change PIN code for access to meter settings (PIN2)

5 PIN2	6 Create PIN2 Code	7 Save																																								
<table border="1"> <tr><td>Meter info</td><td>RS-485</td></tr> <tr><td>PIN1</td><td>PIN2</td></tr> <tr><td>Reset</td><td></td></tr> </table> 	Meter info	RS-485	PIN1	PIN2	Reset		<p>Pin code for access to settings</p> <table border="1"> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td></td><td>+</td><td>+</td><td>+</td><td></td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td></td></tr> </table> <table border="1"> <tr><td>Save</td><td>«</td></tr> </table> 	PIN	1	0	0	0		+	+	+			-	-	-		Save	«	<p>Pin code for access to display settings</p> <table border="1"> <tr><td>PIN</td><td>1</td><td>0</td><td>0</td><td>0</td></tr> <tr><td>On</td><td>+</td><td>+</td><td>+</td><td>+</td></tr> <tr><td></td><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> <table border="1"> <tr><td></td><td>«</td></tr> </table>	PIN	1	0	0	0	On	+	+	+	+		-	-	-	-		«
Meter info	RS-485																																									
PIN1	PIN2																																									
Reset																																										
PIN	1	0	0	0																																						
	+	+	+																																							
	-	-	-																																							
Save	«																																									
PIN	1	0	0	0																																						
On	+	+	+	+																																						
	-	-	-	-																																						
	«																																									

Maintenance

tSENSE (Disp) is maintenance free. Internal self-adjusting calibration (ABC) function takes care of normal long term drift. To secure highest accuracy, a time interval of five years is recommended between CO₂ calibrations, unless some special situations have occurred.

Software can be downloaded free at www.senseair.com.
USB-cable and zero calibration kit can be ordered from SenseAir.

Check can be done on site without interfering with ventilation system.

Directives

This product is in accordance with the
EMC directive 2014/30/EC, 92/31/EEG, RoHS directive 2011/65/EU
including amendments by the CE-marking directive 93/68/EEC

The product fulfils the following demands:

EN 61000-4-2 level 2,
EN 61000-4-3 level 2,
EN 61000-4-4 level 4,
EN 61000-4-6,
EN 61000-4-8 level 4,
EN 55022 class B

CE